


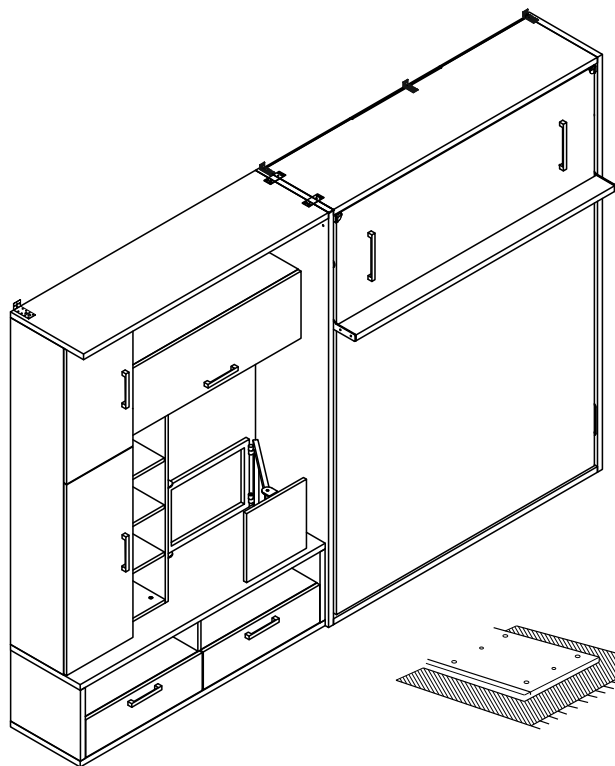

MULTIMO

161- SALOON NEW



100min.





Technical Service




220min.



End User

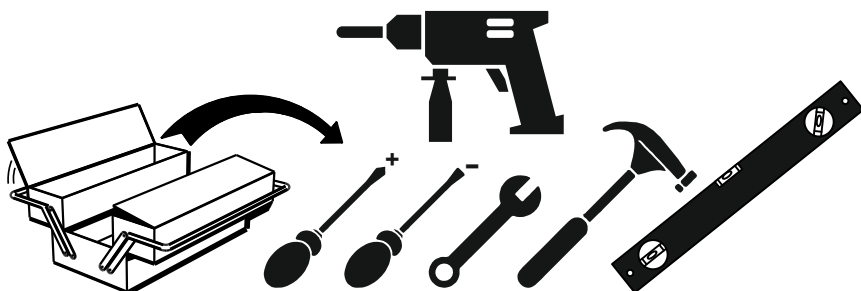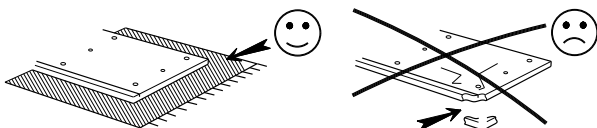

VIDEO

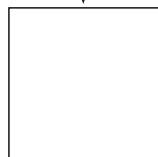


























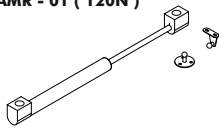



link

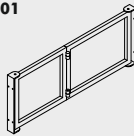Assembly Instructions

Track Title	Piece	(inch)			(mm)			
		Thickness	Length	Width	Piece	Thick	Height	Most
A	1	57,32	16,54	1,18	1	1456	420	30
B (R-L)	2	81,89	17,32	0,71	2	2080	440	18
C	1	57,32	17,32	1,18	1	1456	440	30
D	2	57,32	5,91	0,71	2	1456	150	18
E	1	57,32	4,33	1,18	1	1456	110	30
F	1	58,11	17,32	0,71	1	1476	440	18
G (R-L)	2	63,78	12,60	0,71	2	1620	320	18
H	2	14,33	12,60	0,71	2	364	320	18
I	1	14,33	11,81	0,71	1	364	300	18
J	3	14,33	11,02	0,71	3	364	280	18
K	2	12,36	10,24	0,71	2	314	260	18
L	2	42,28	10,24	0,71	2	1074	260	18
M	1	58,19	16,54	16,93	1	1478	420	430
N (R-L)	2	39,37	9,84	0,71	2	1000	250	18
O	2	10,39	9,84	0,71	2	264	250	18
P	2	10,39	8,86	0,71	2	264	225	18
R	1	24,25	15,67	0,71	1	616	398	18
S	1	39,17	15,67	0,71	1	995	398	18
T	1	42,05	14,17	0,71	1	1068	360	18
U	1	78,54	56,46	0,71	1	1995	1434	18
Y	1	10,39	8,86	0,71	1	264	225	18
Z	1	9,84	5,71	0,71	1	250	145	18
X-1	3	81,06	7,48	0,31	3	2057	489	8
X-2	1	63,03	15,00	0,31	1	1601	381	8
X-3	1	41,54	13,03	0,31	1	1055	331	8
X-4	1	38,58	11,02	0,31	1	980	280	8
X-5	1	12,05	43,70	0,31	1	360	360	18

Accessories List


<p>MXN 02</p>  <p>46 / piece</p> <p>TFC - 01 (8x70) mm</p>	<p>MNG - 01</p>  <p>46 / piece</p> <p>DSE - 01 (40x90x32) mm</p>  <p>4 / piece</p> <p>VDA - 01 (6,5x50) mm</p>  <p>4 / piece</p> <p>AVT - 01</p>  <p>7 / piece</p> <p>TSY - 01</p>  <p>2 / piece</p> <p>CT - 03 (6x50) mm</p>  <p>10/ piece</p> <p>KP - 01 (128) mm</p>  <p>5 / piece</p> <p>SC - 76</p>  <p>2 / piece</p> <p>TVM - 01</p>  <p>1 / piece</p>	<p>KVL 01</p>  <p>48 / piece</p> <p>VTB - 01 (4,8x16) mm</p>  <p>24 / piece</p> <p>TAP - 02</p>  <p>4 / piece</p> <p>IM - 01 (6x30) mm</p>  <p>4 / piece</p> <p>VD - 03 (3,5x18) mm</p>  <p>30 / piece</p> <p>CT - 04 (6x20) mm</p>  <p>8 / piece</p> <p>VKP - 01 (22) mm</p>  <p>10 / piece</p> <p>H 01</p>  <p>2 / piece</p> <p>KKS - 01</p>  <p>2 / piece</p>	<p>TAP - 01</p>  <p>46 / piece</p> <p>PL - 02 (8x22x1) mm</p>  <p>4 / piece</p> <p>OT-054</p>  <p>2 / piece</p> <p>CT - 01 (6x40) mm</p>  <p>2 / piece</p> <p>PM - 01</p>  <p>20 / piece</p> <p>CT - 05 (6x35) mm</p>  <p>4 / piece</p> <p>VKP - 03 (40) mm</p>  <p>4 / piece</p> <p>TTC 01</p>  <p>4 / piece</p>
<p>AMR - 01 (120N)</p>  <p>1 / piece</p>			

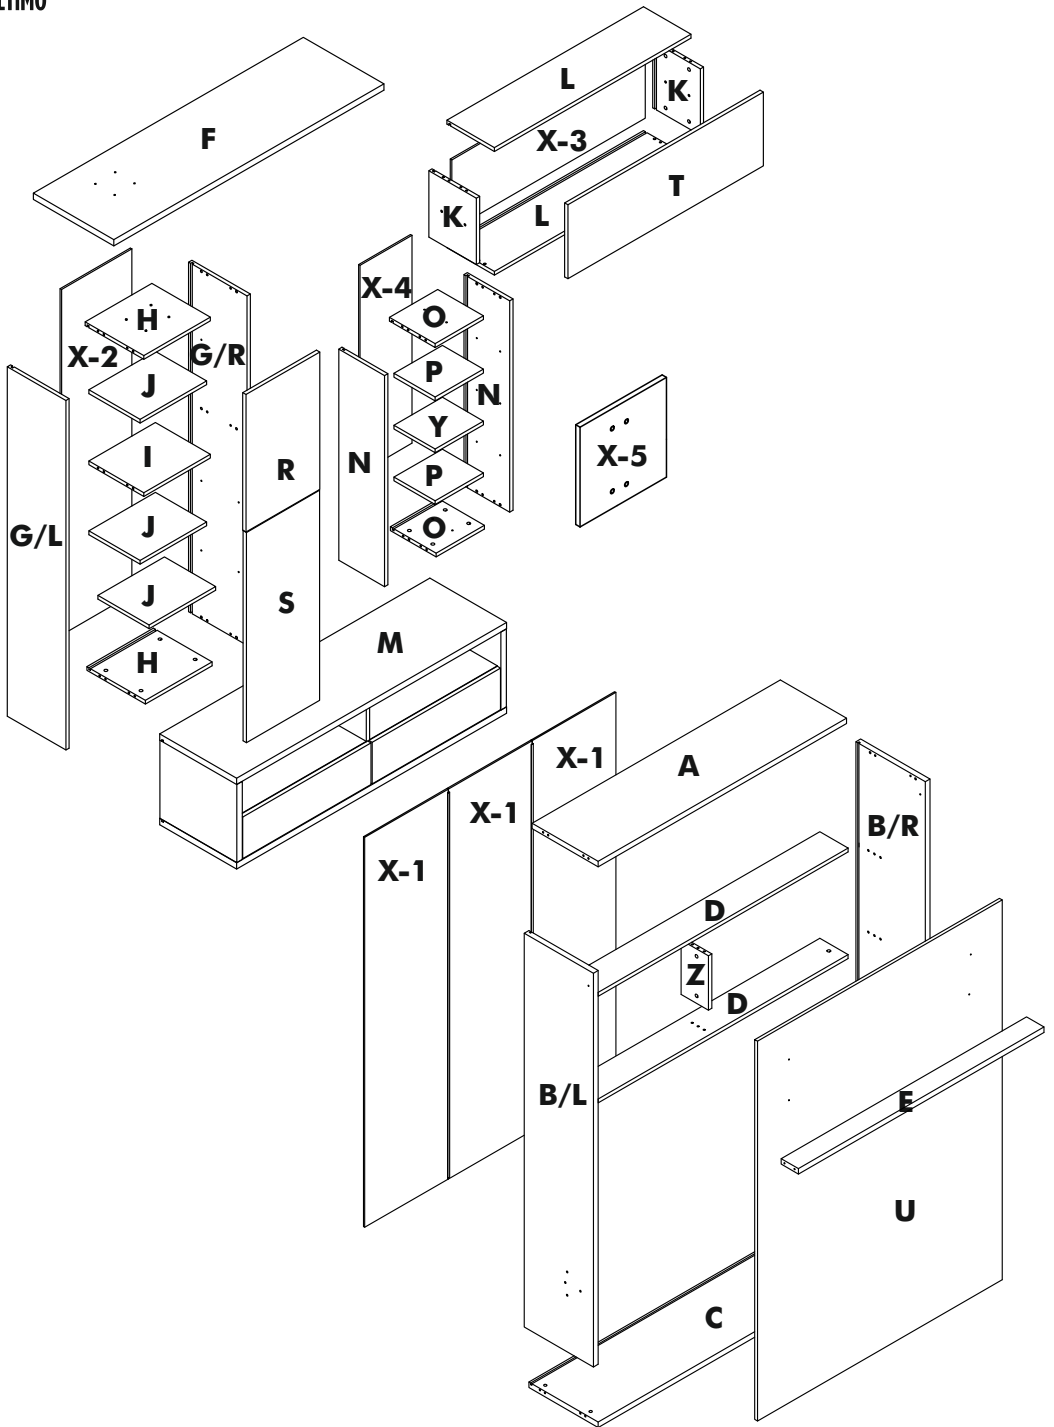




STEP 1




MNX - 02



KVL 01

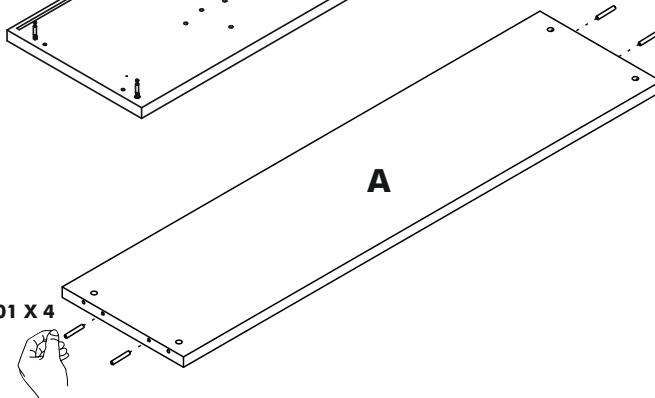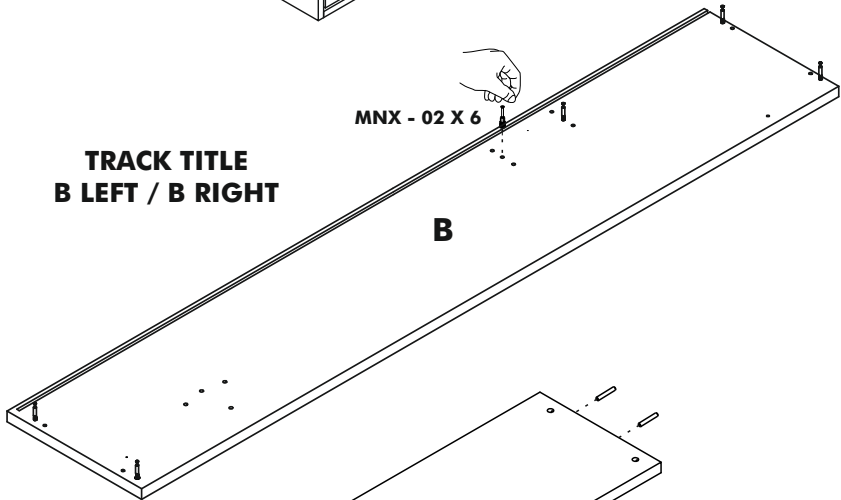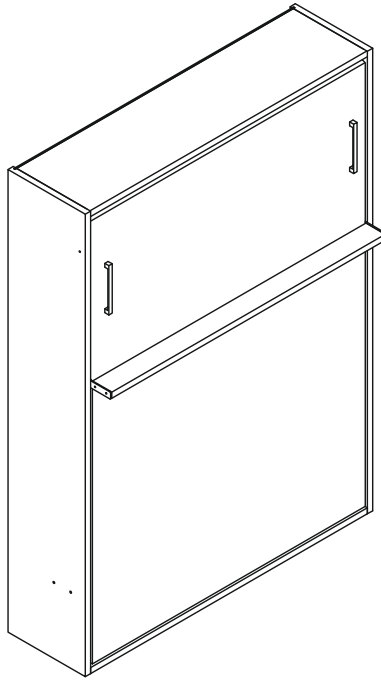


VIDEO




link


STEP 2

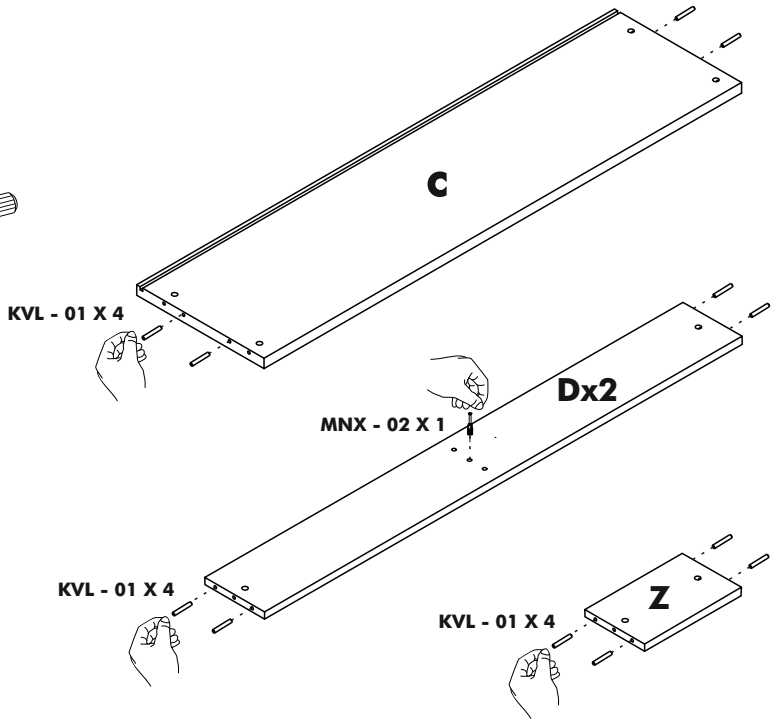

STEP 3

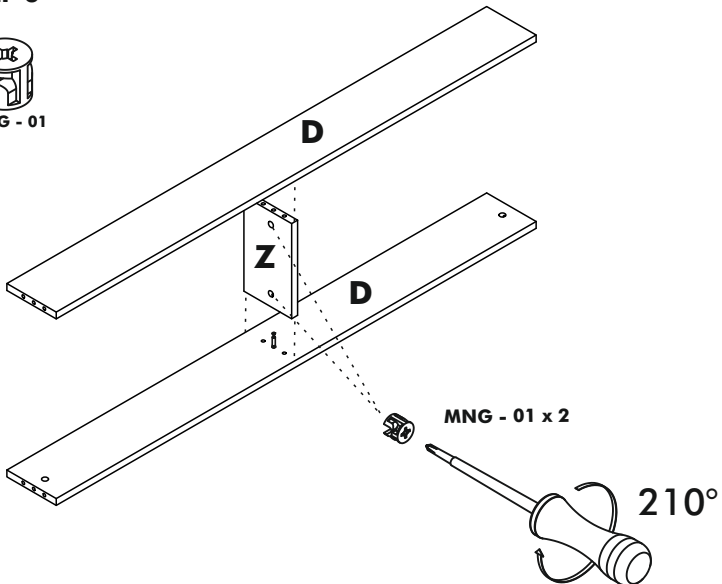


VIDEO




link


STEP 4

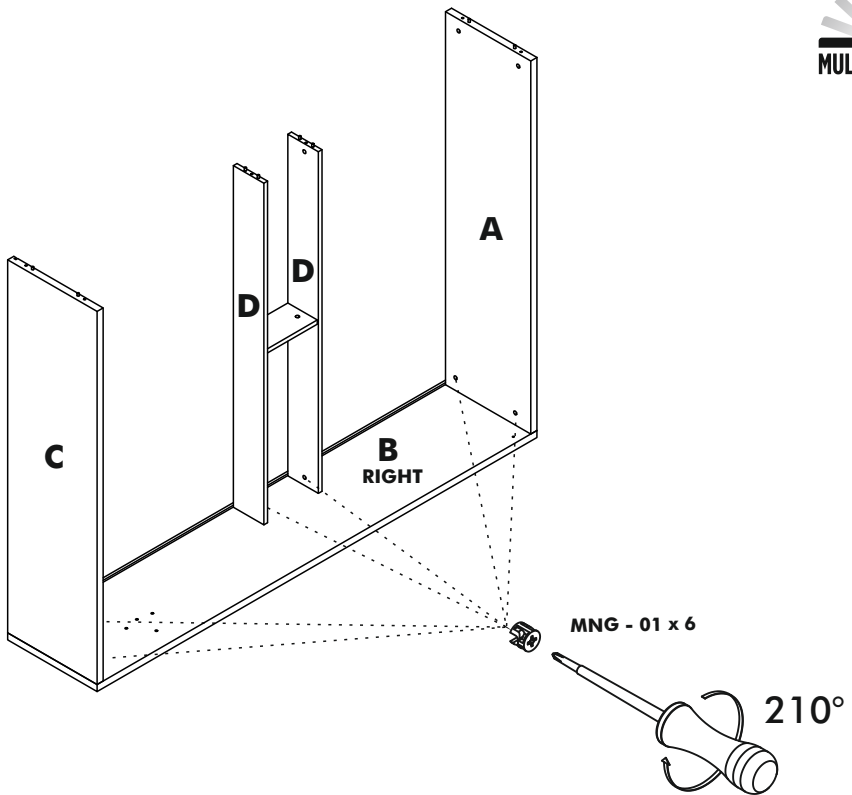


STEP 5

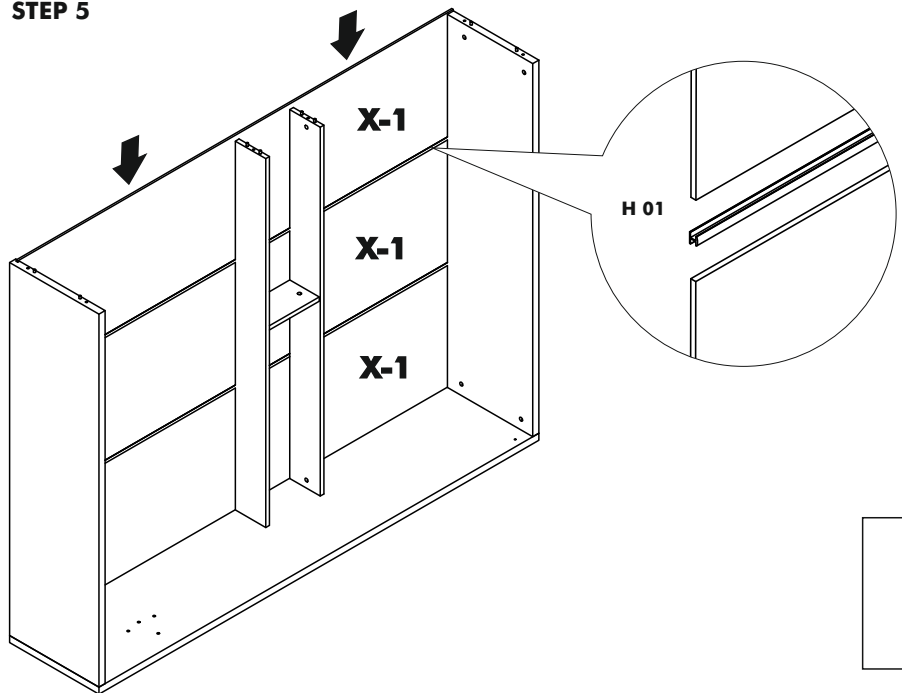


STEP 6

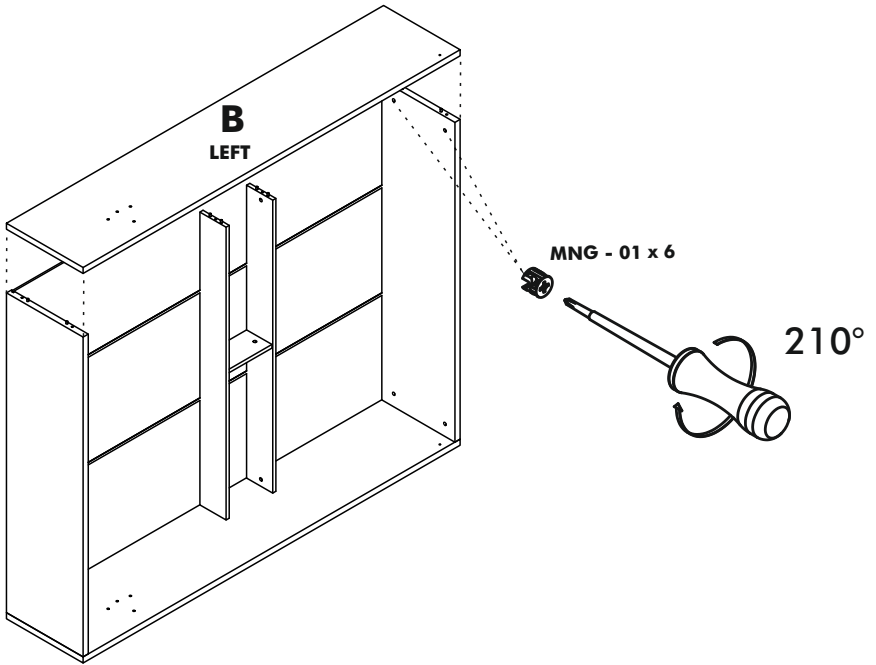

STEP 7

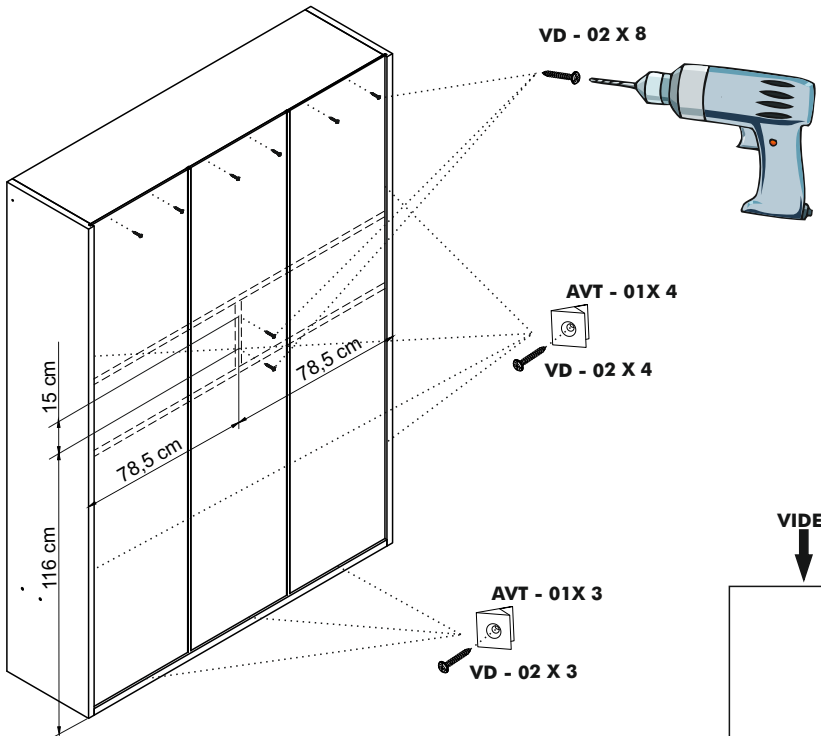


VIDEO




link

STEP 8

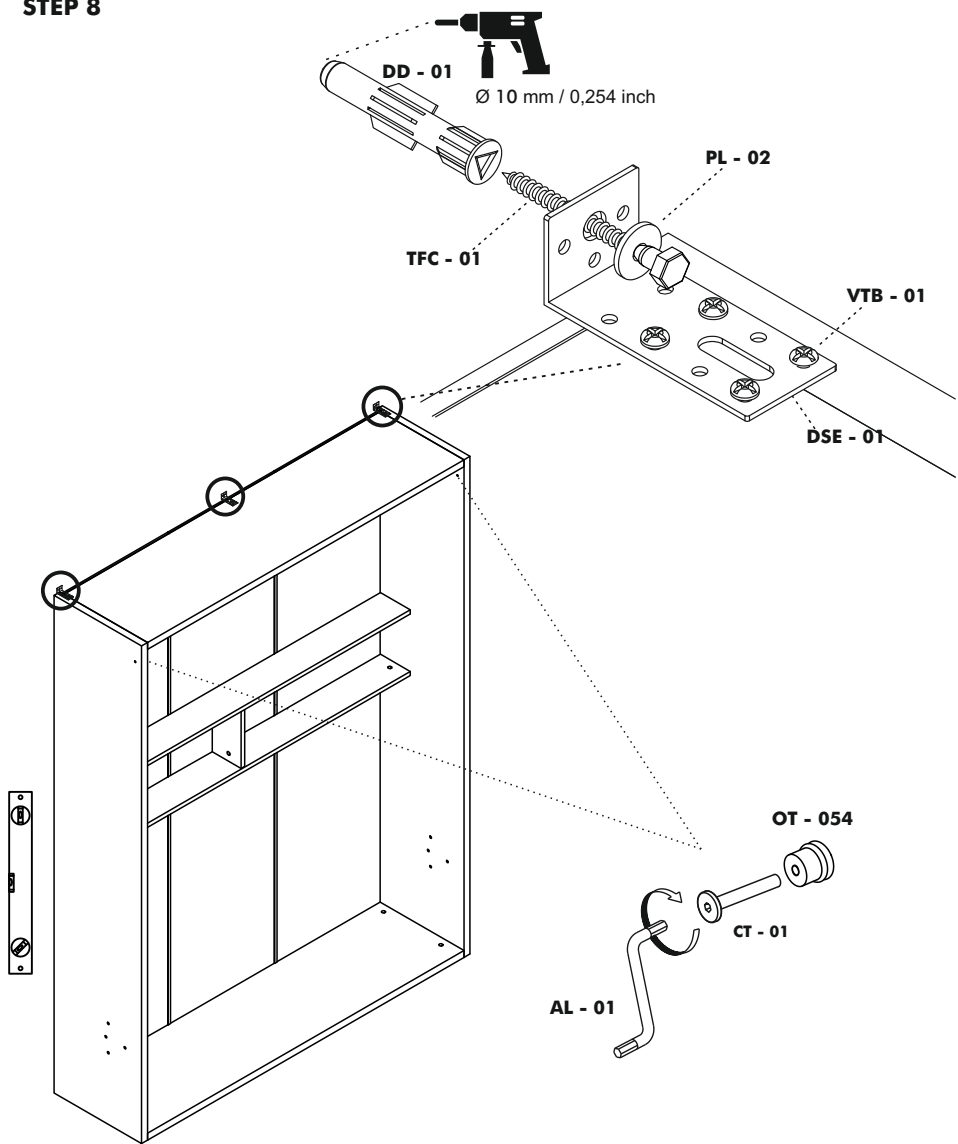


VIDEO



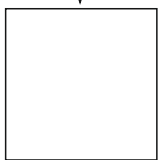


link


STEP 9

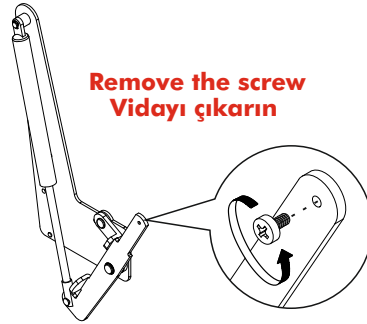

CAUTION
DO NOT UNLOCK
BEFORE INSTALL

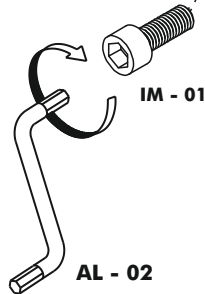
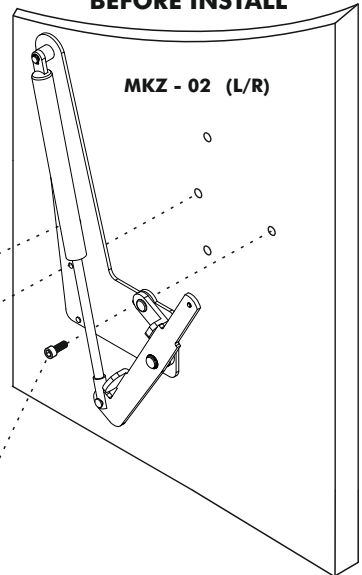
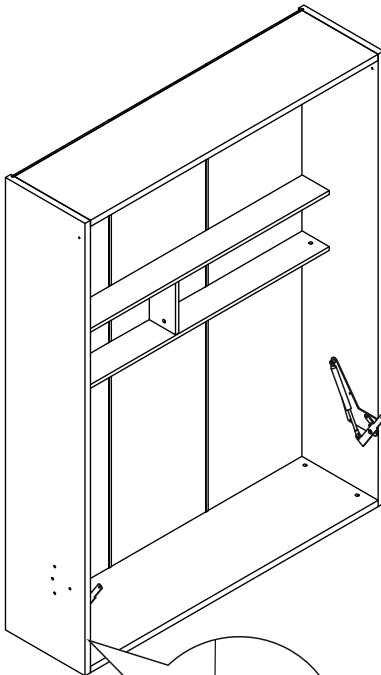


VIDEO





link


STEP 10

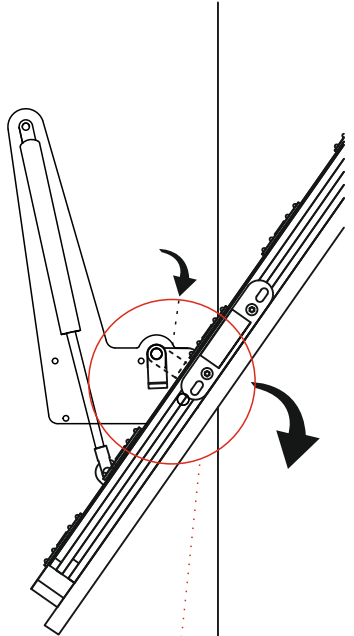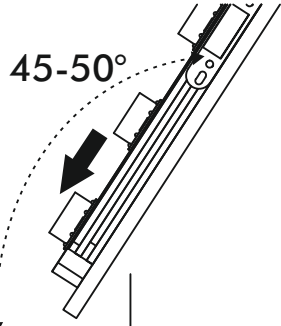

**KAPAK KAPATILMADAN KİLİDİ İNDİRİN !!!
LET THE STOPPER LOCK MOVE DOWN !!!**

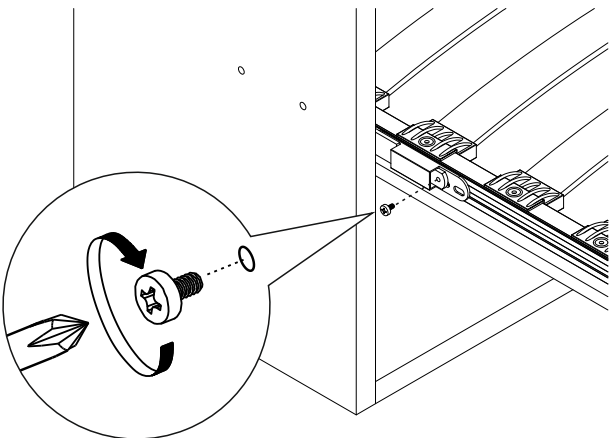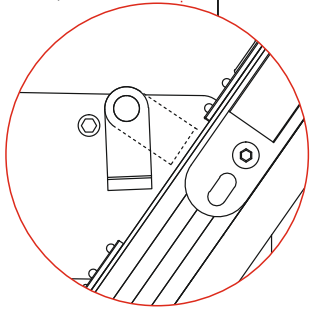


VIDEO



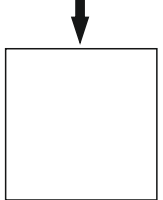


link

STEP 11

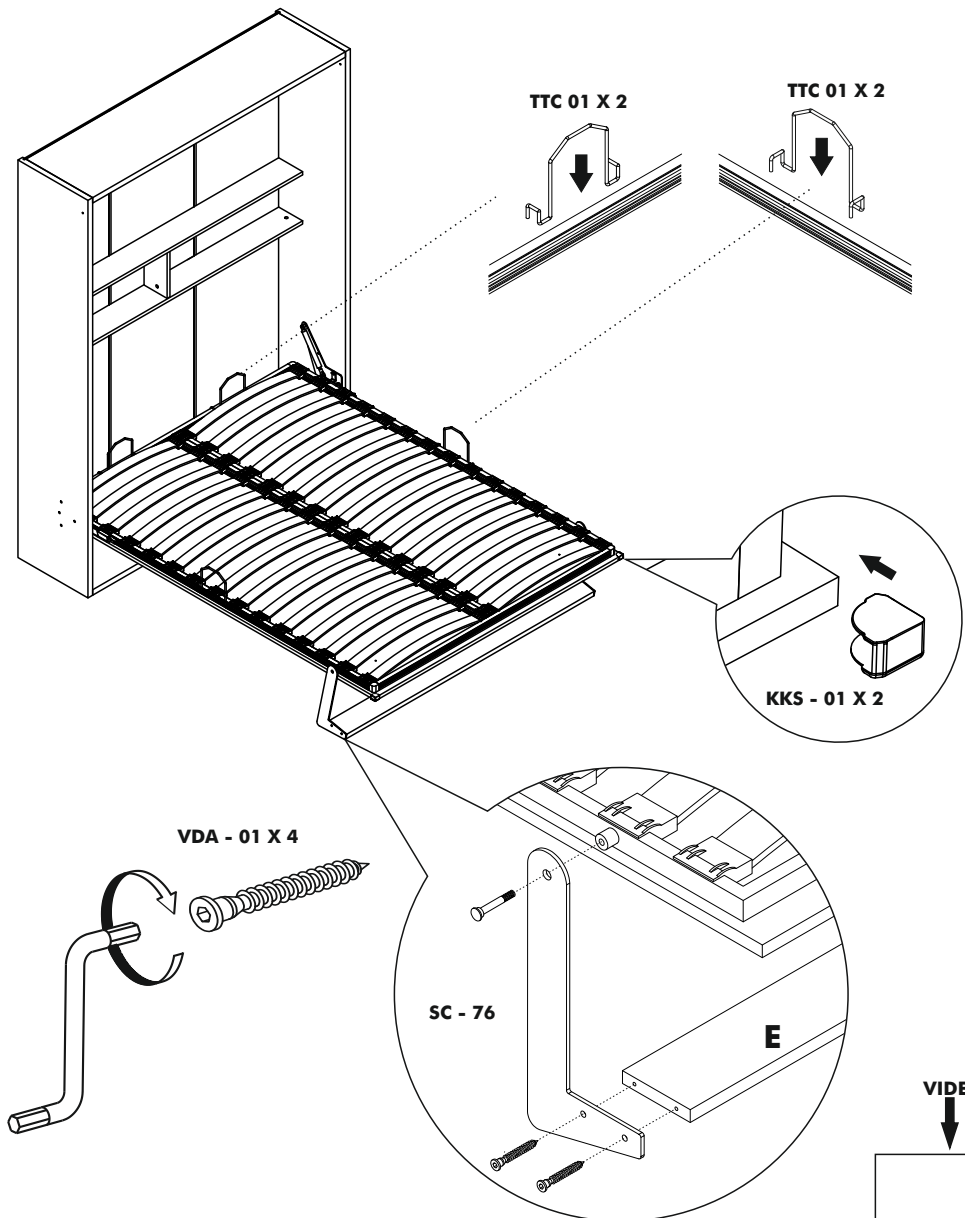

STEP 12





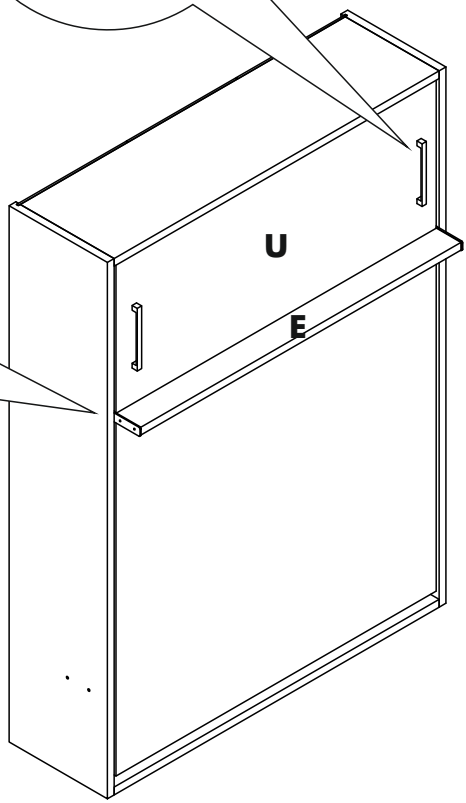
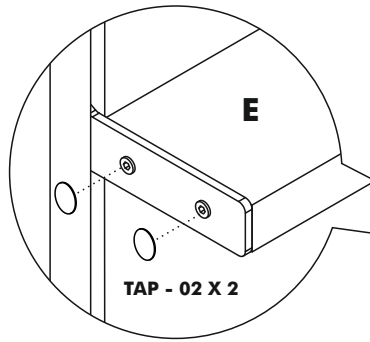
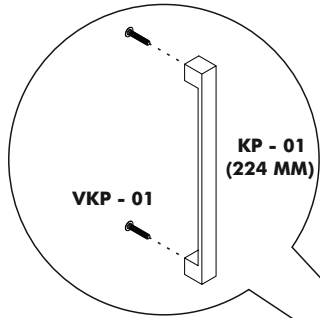


VIDEO




link

STEP 13

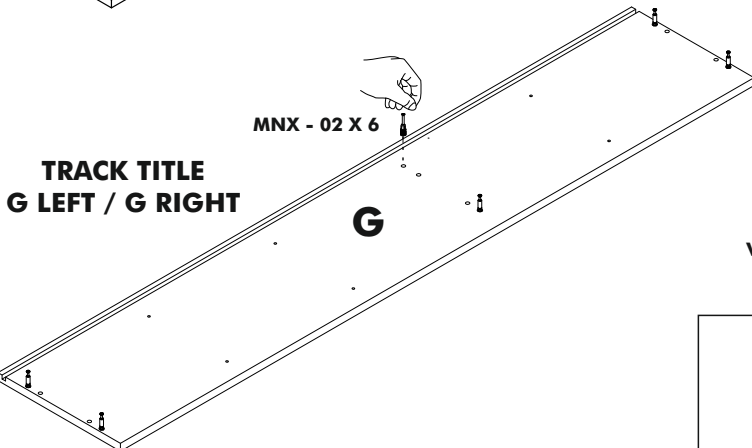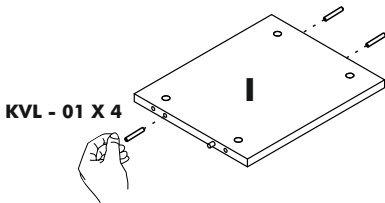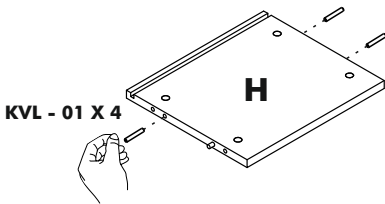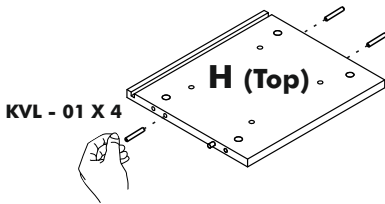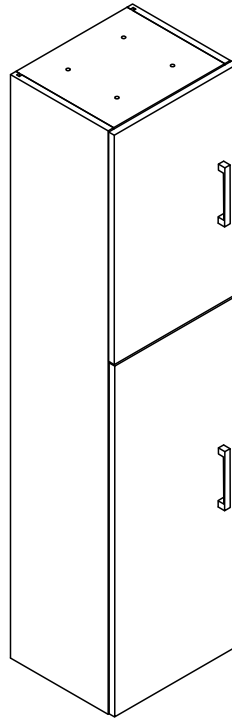



VIDEO




link



STEP 14

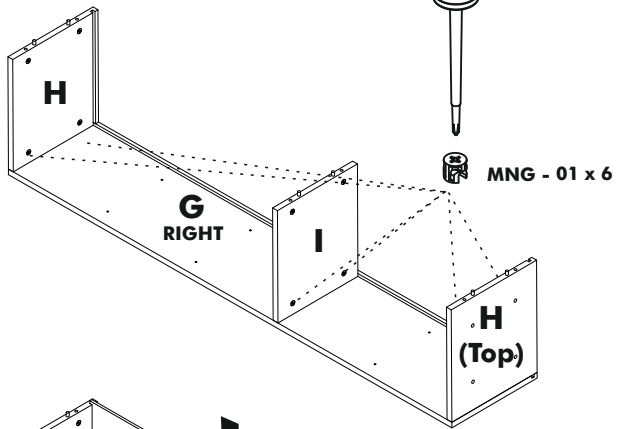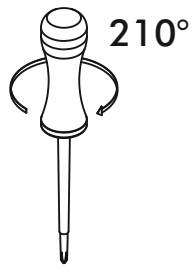


STEP 15

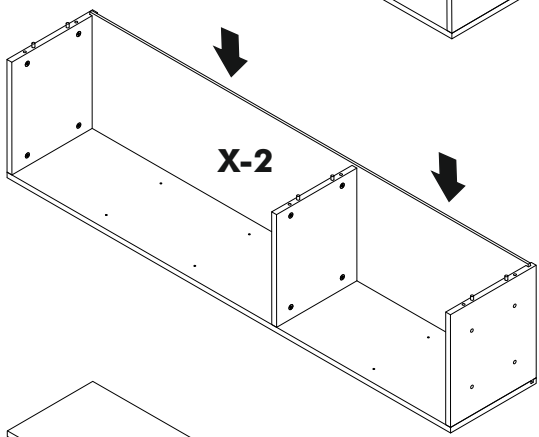

STEP 16

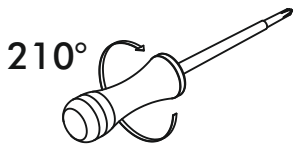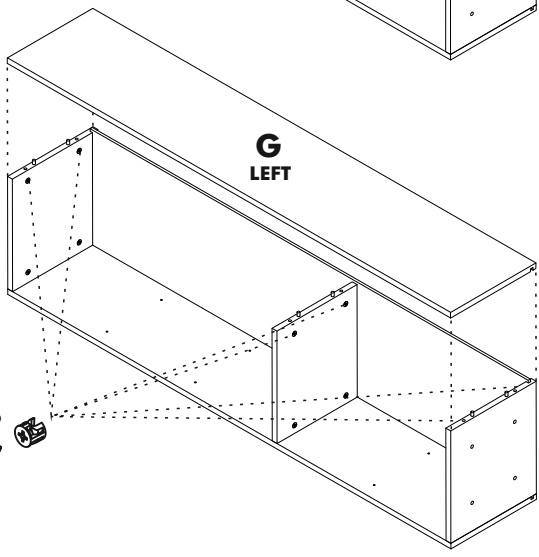


VIDEO
↓




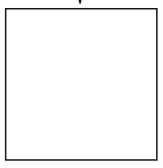


link


STEP 17

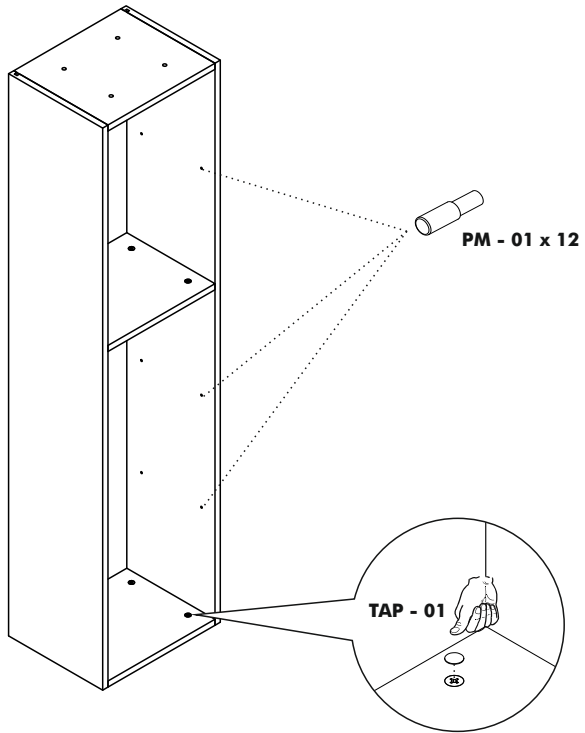



STEP 18

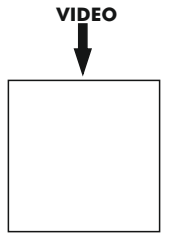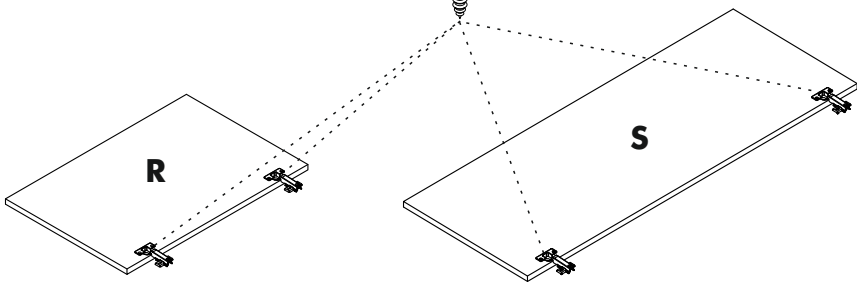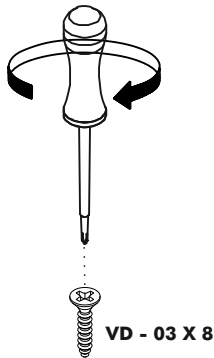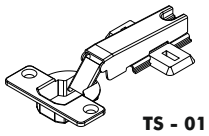


STEP 19

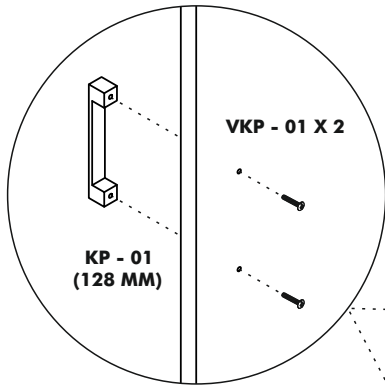


STEP 20

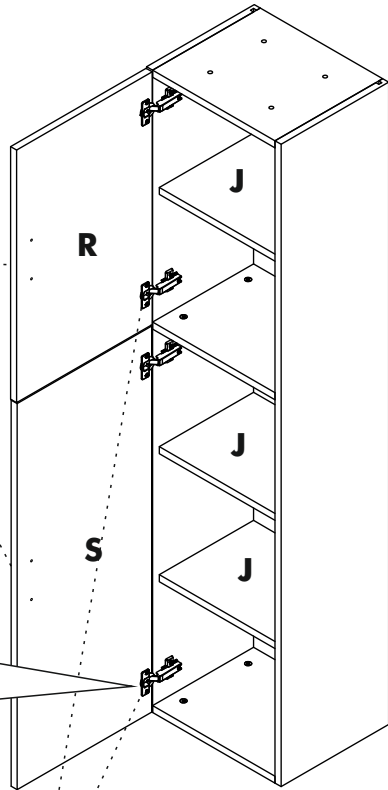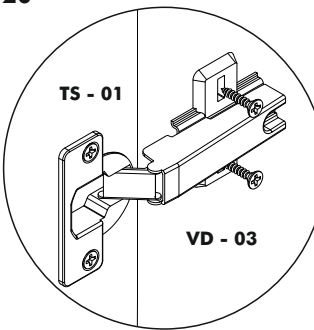

TSY- 01 x 2

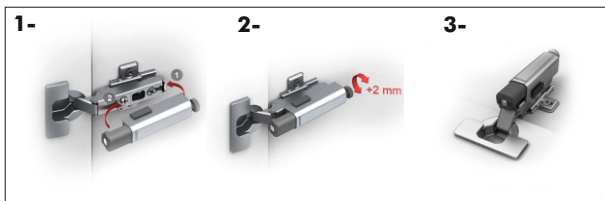

VIDEO




link





STEP 21




MNX - 02



KVL 01

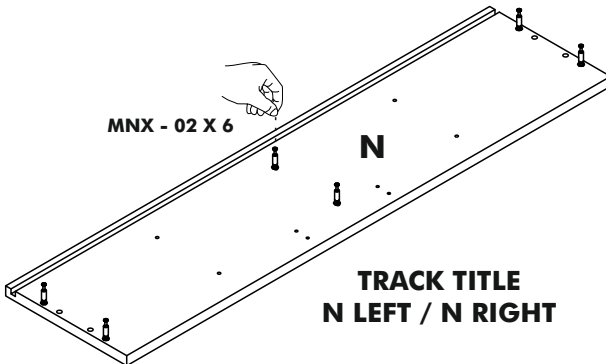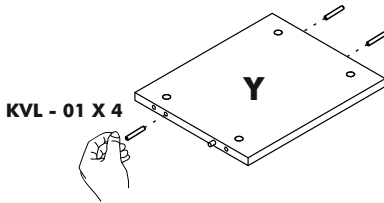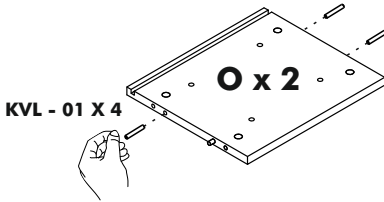
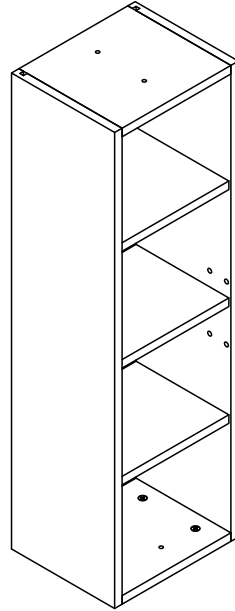


VIDEO




link




STEP 22

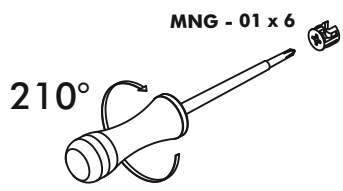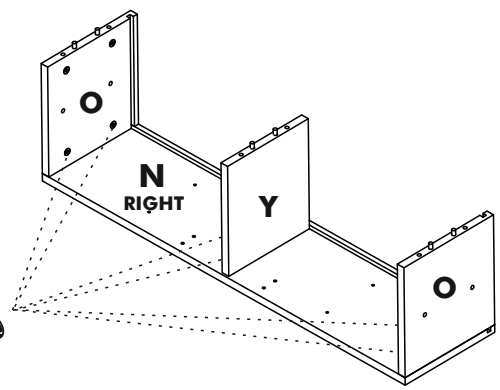


STEP 23

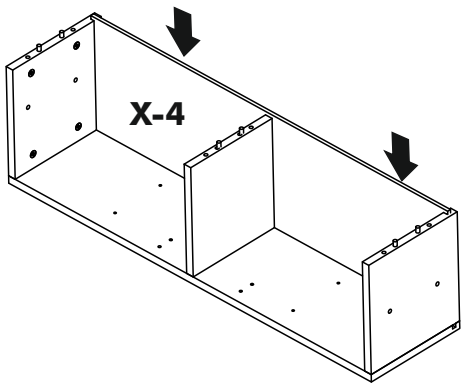


STEP 24

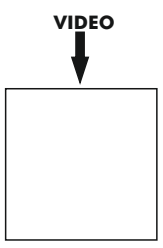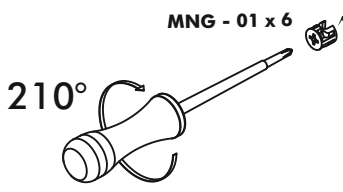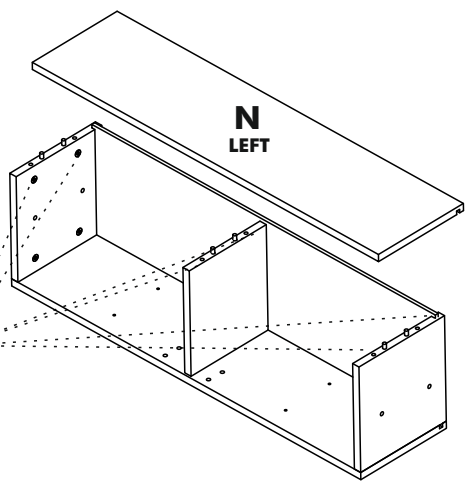





STEP 25

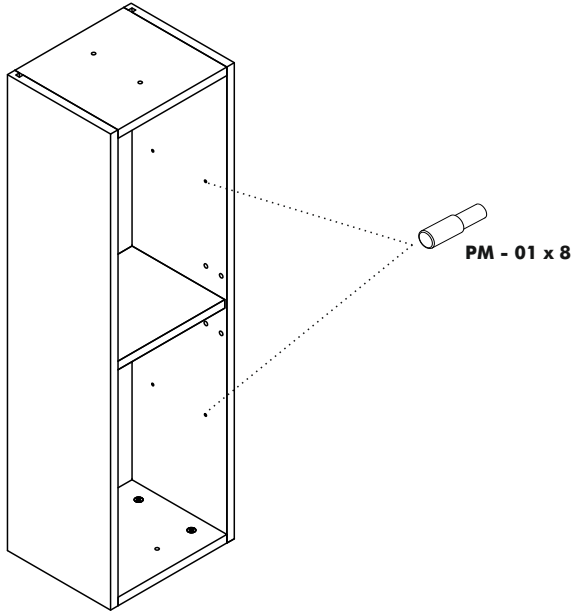

STEP 26

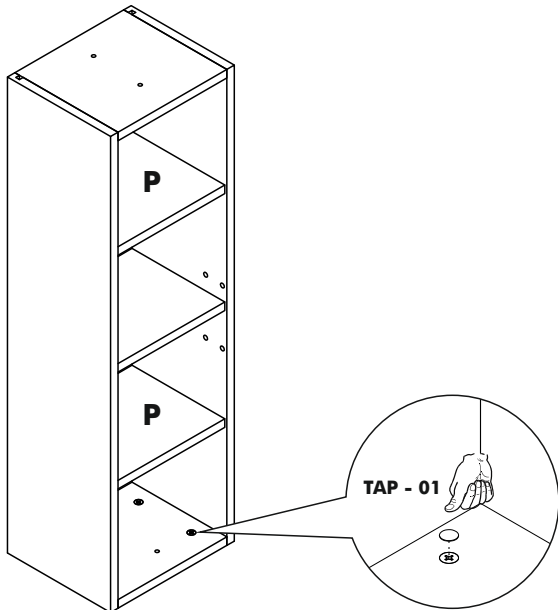


STEP 27

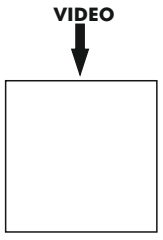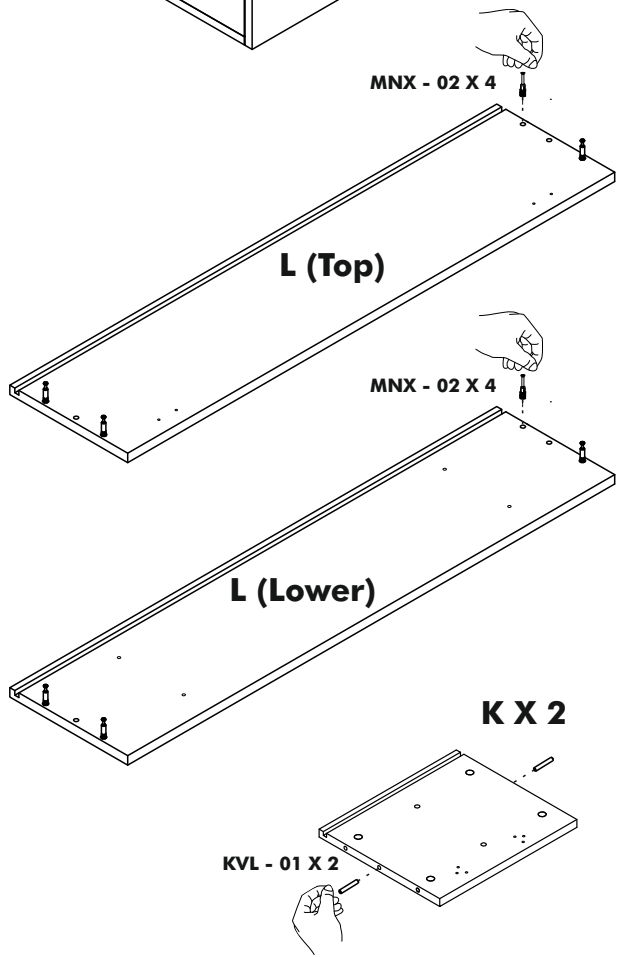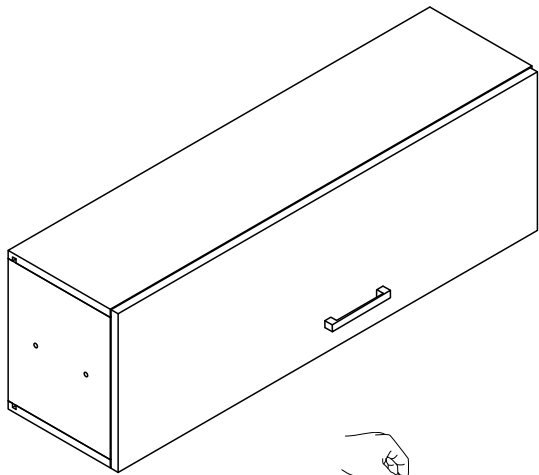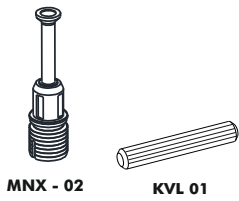


STEP 28



MNG - 01

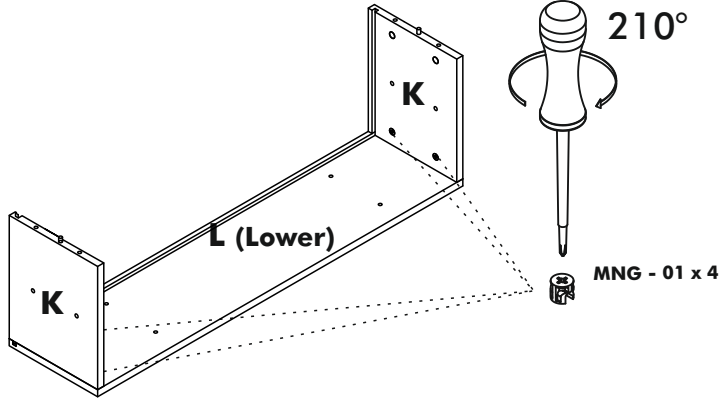


STEP 29

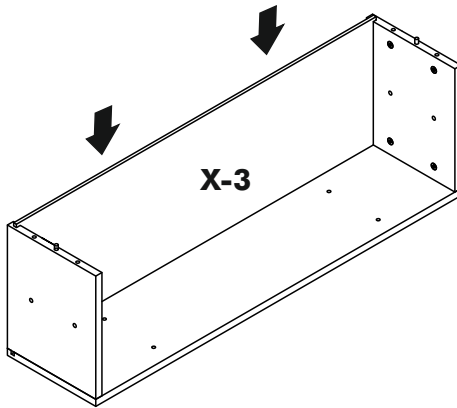


STEP 30




MNG - 01

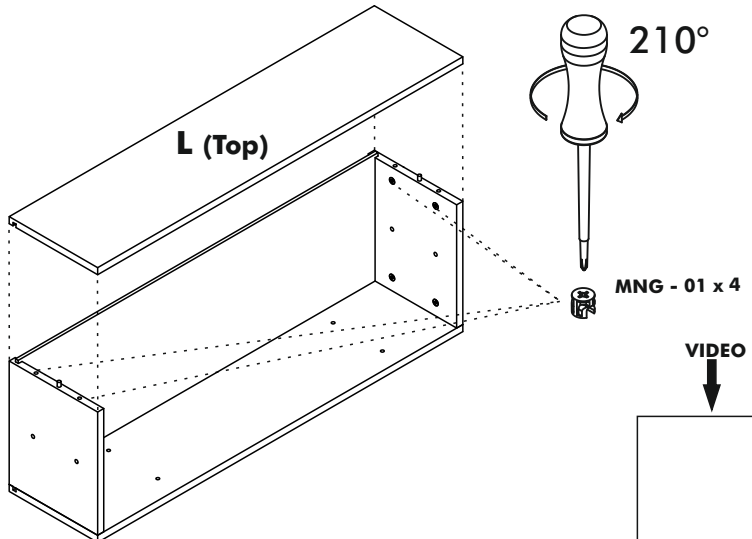


STEP 31

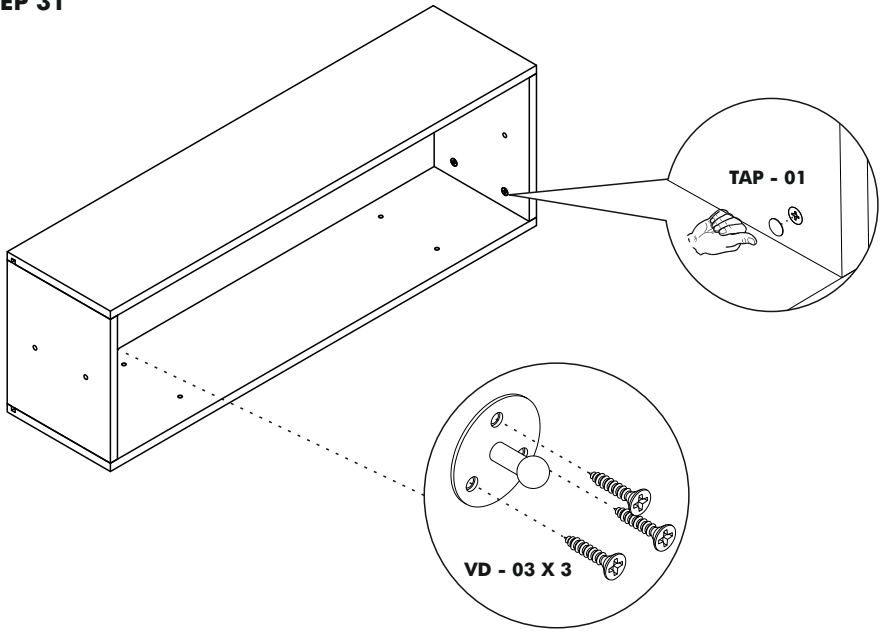


STEP 32

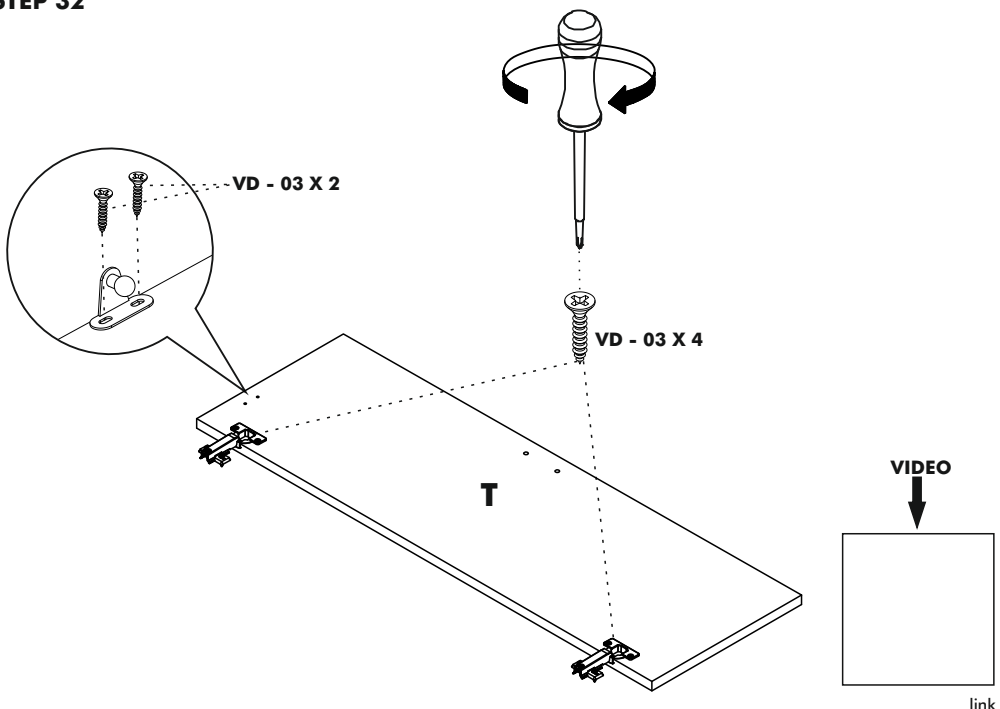


STEP 33

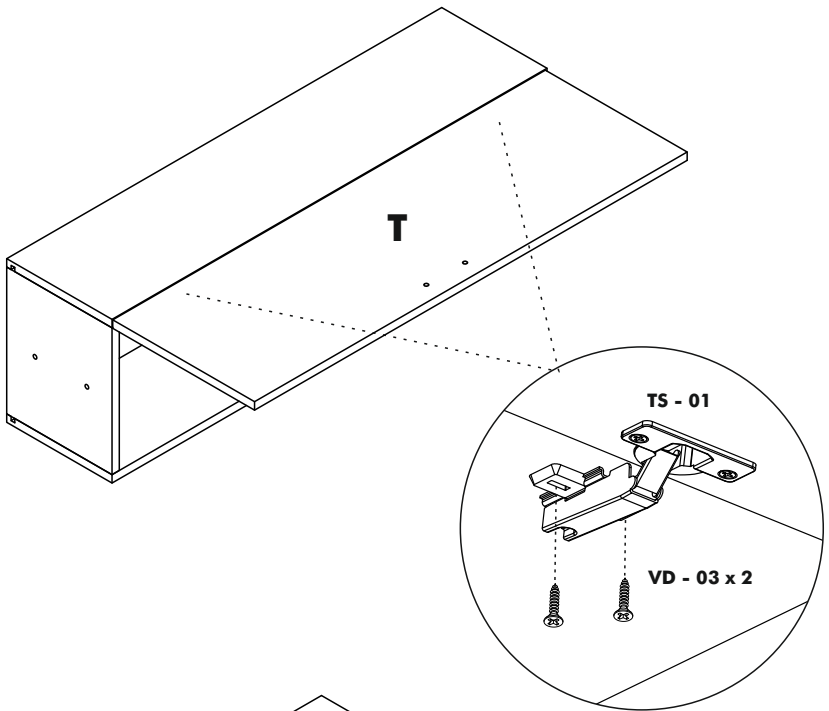

STEP 34


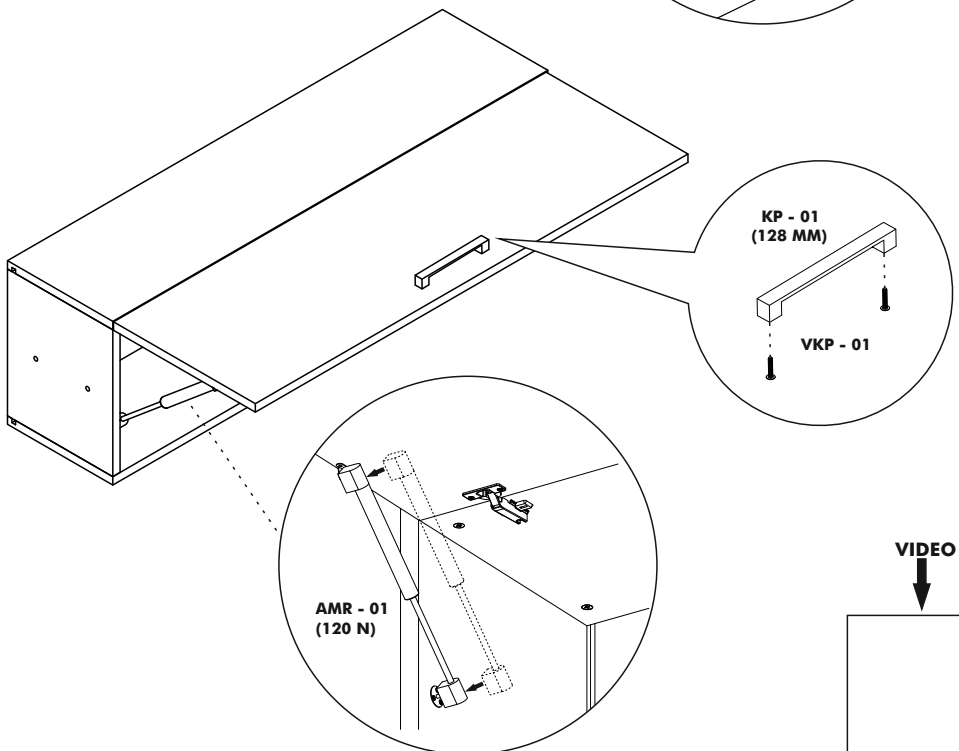


VIDEO




link

STEP 35

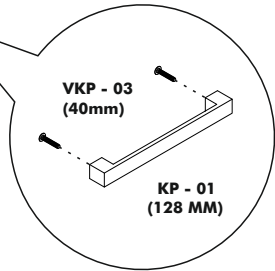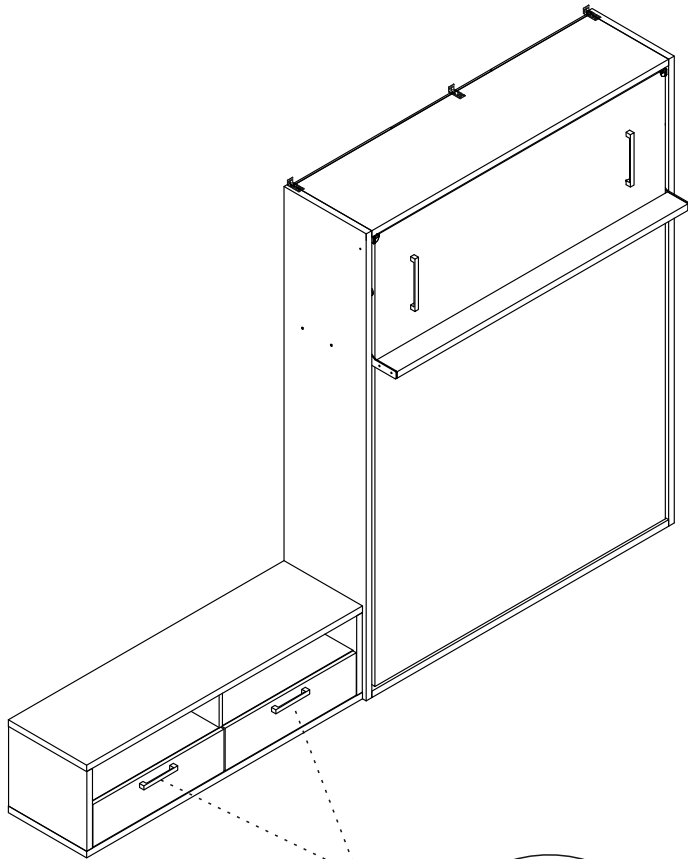


VIDEO

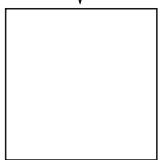


link



STEP 36

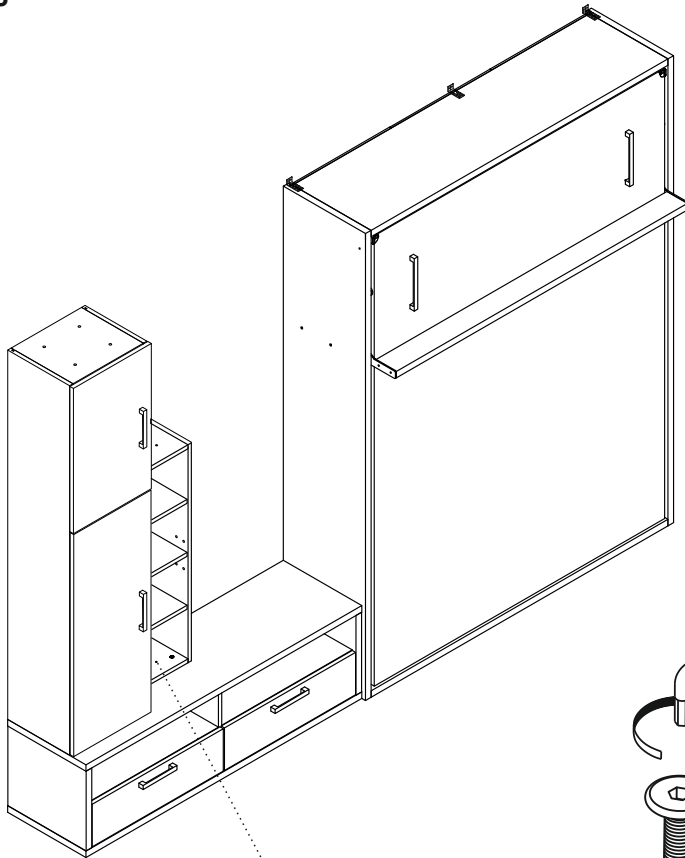


AL - 01

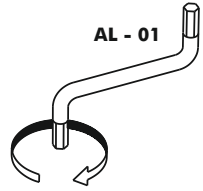

CT - 03 X 2

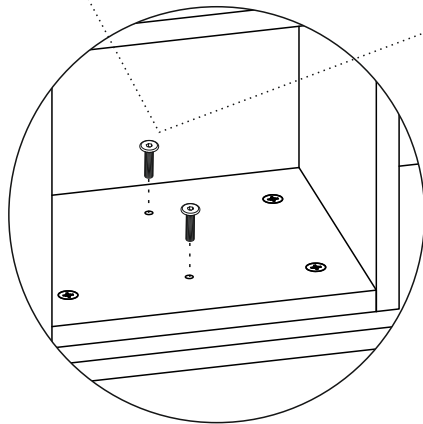


VIDEO



link

STEP 37

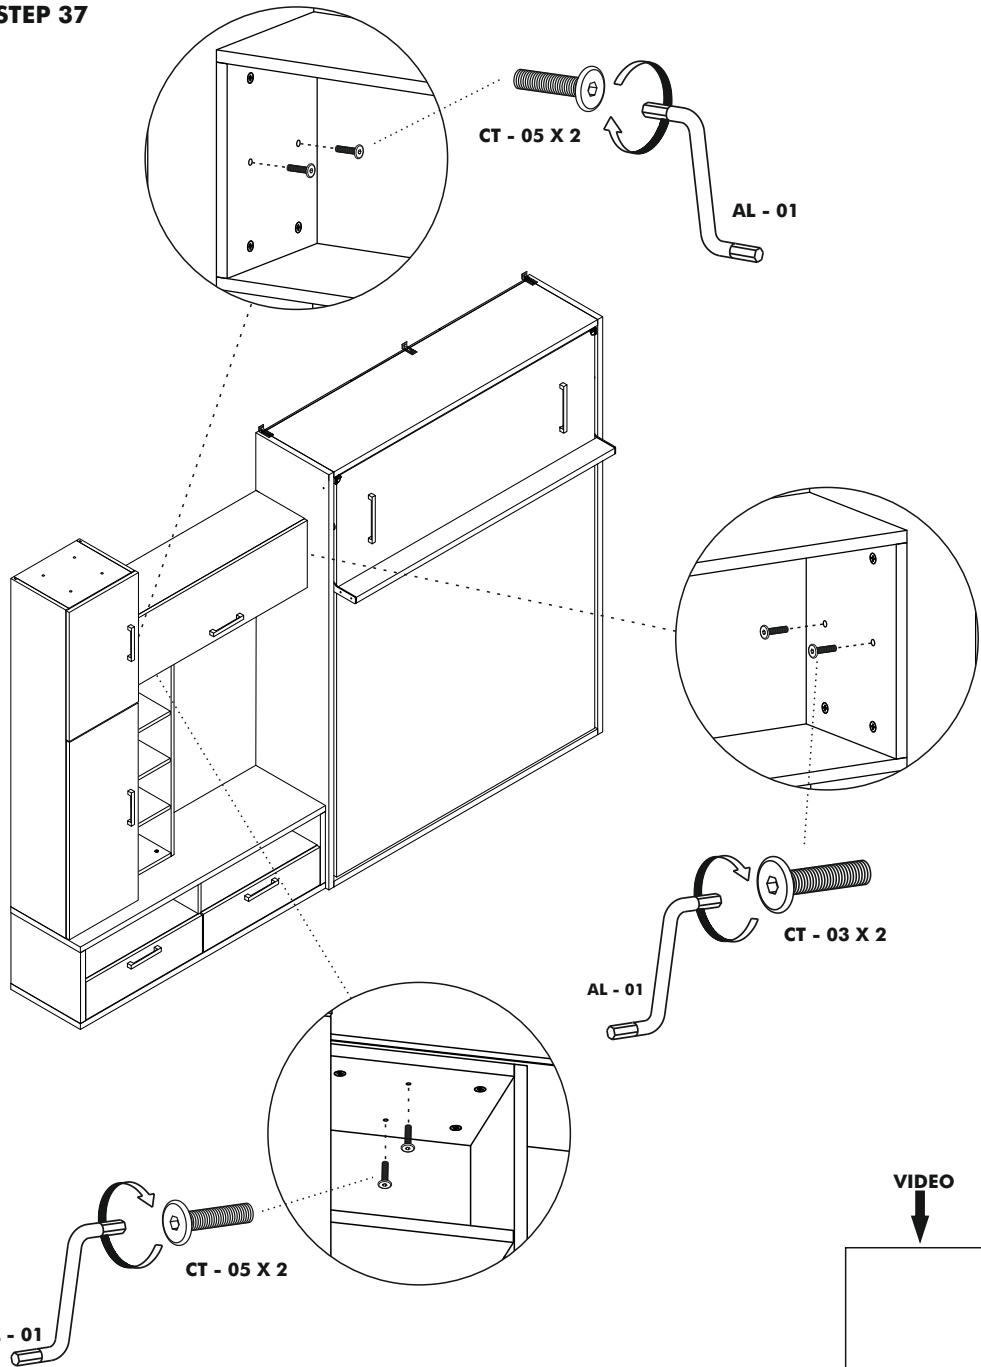

CT - 05 X 2

AL - 01


CT - 03 X 2

AL - 01

CT - 05 X 2




AL - 01

VIDEO

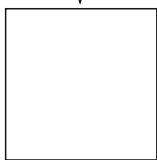


link

STEP 38

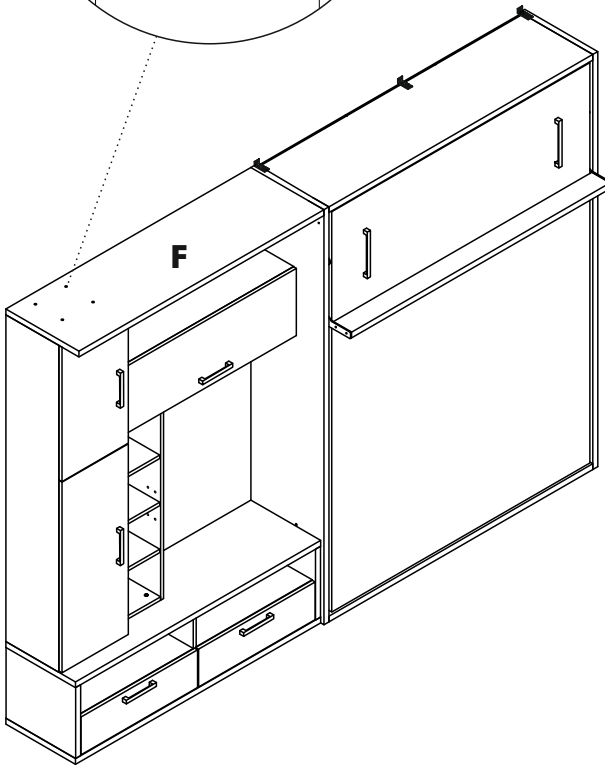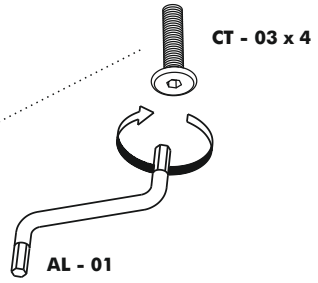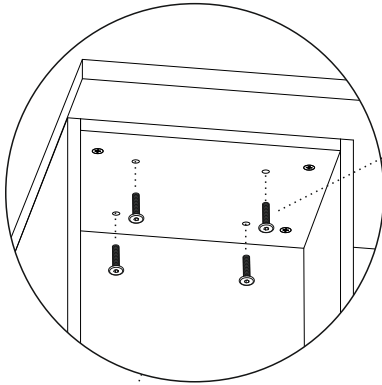


VIDEO




link

STEP 39

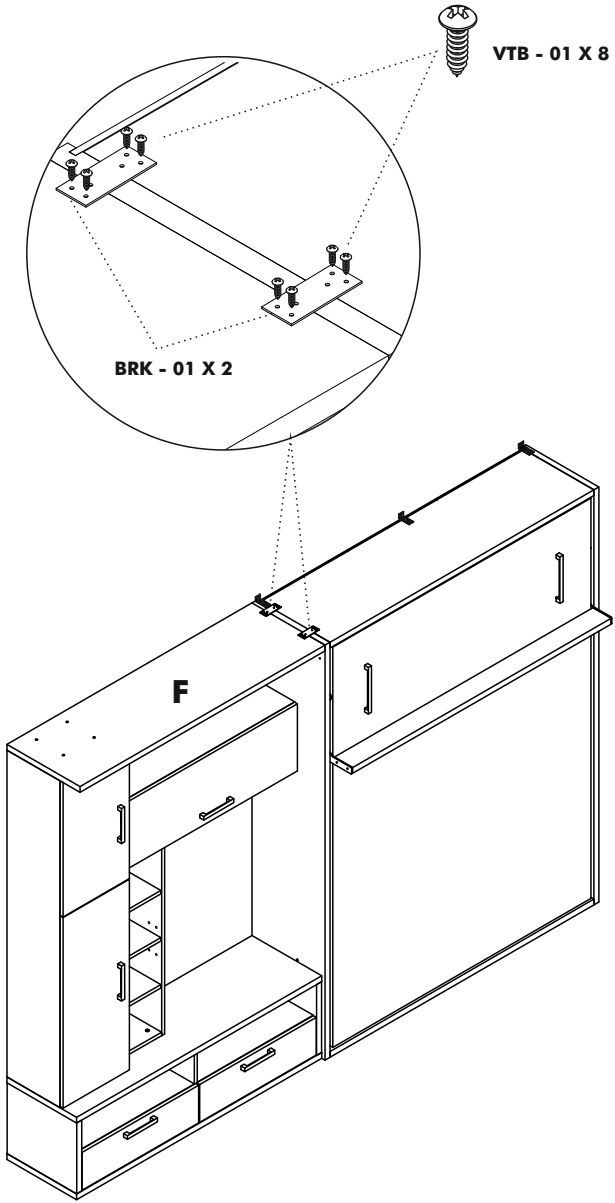


VIDEO

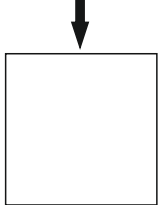


link

STEP 40


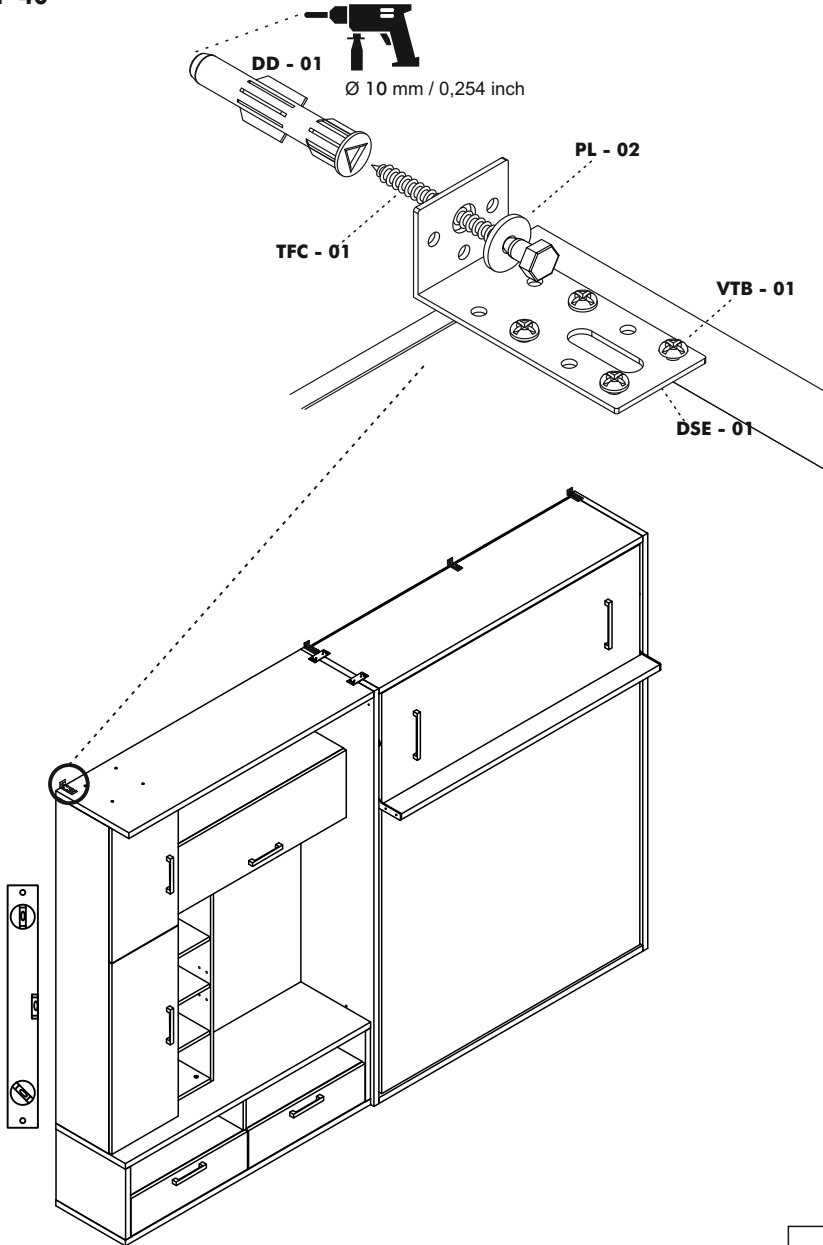


VIDEO




link

STEP 41

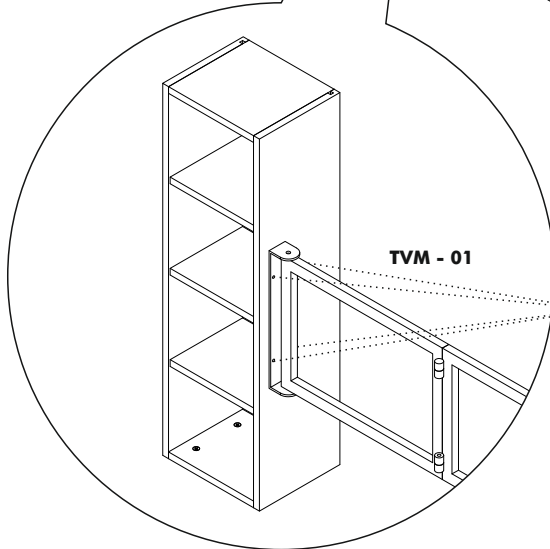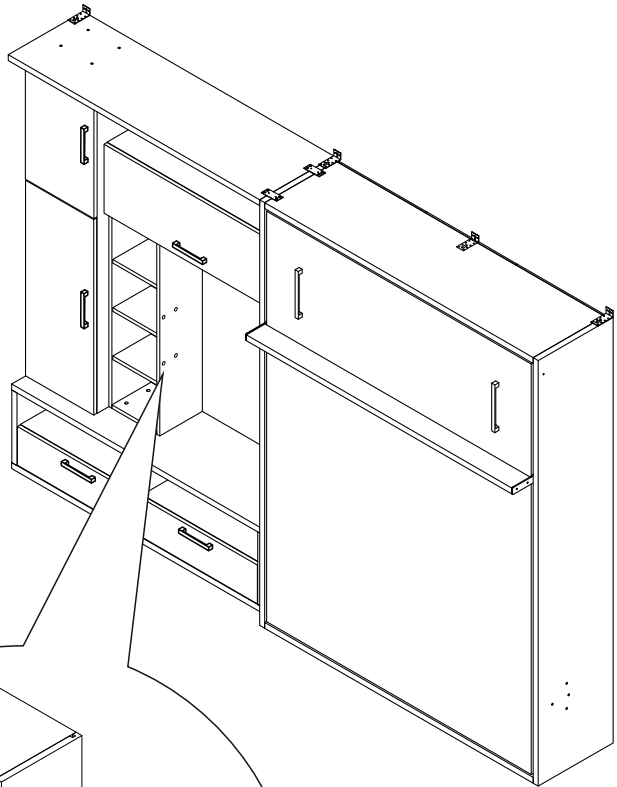


TVM - 01

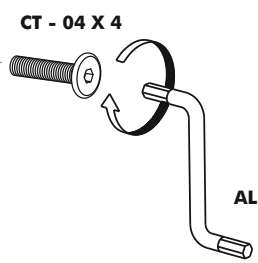

CT - 04 X 4




AL - 01

VIDEO

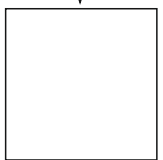


link

STEP 42

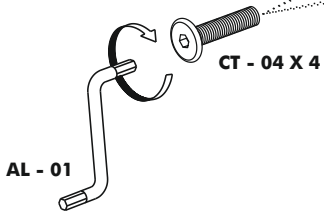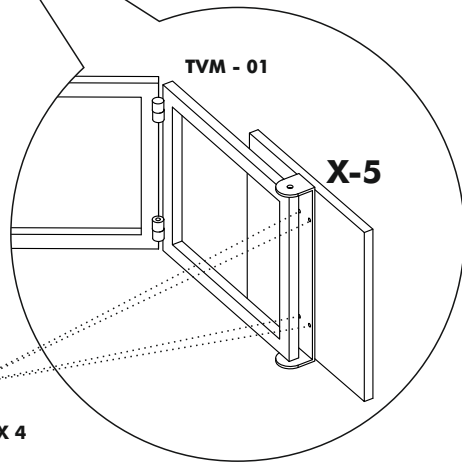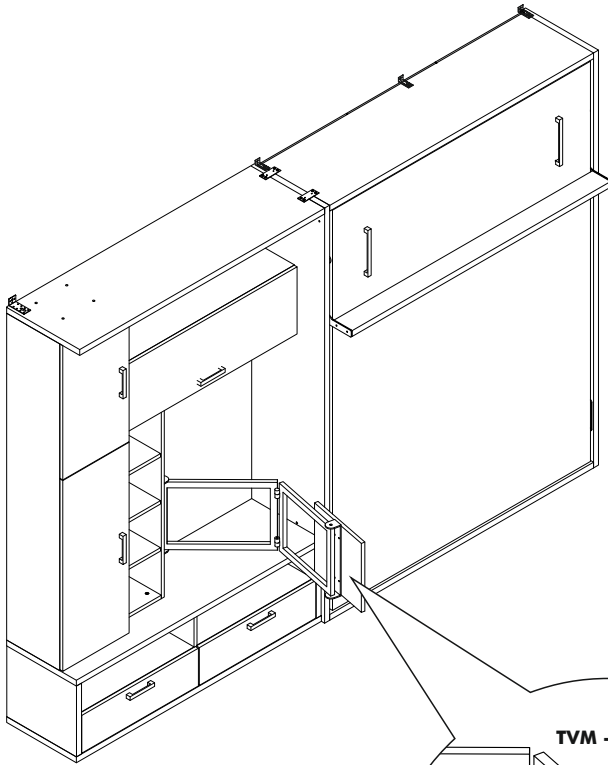


VIDEO



link

STEP 43

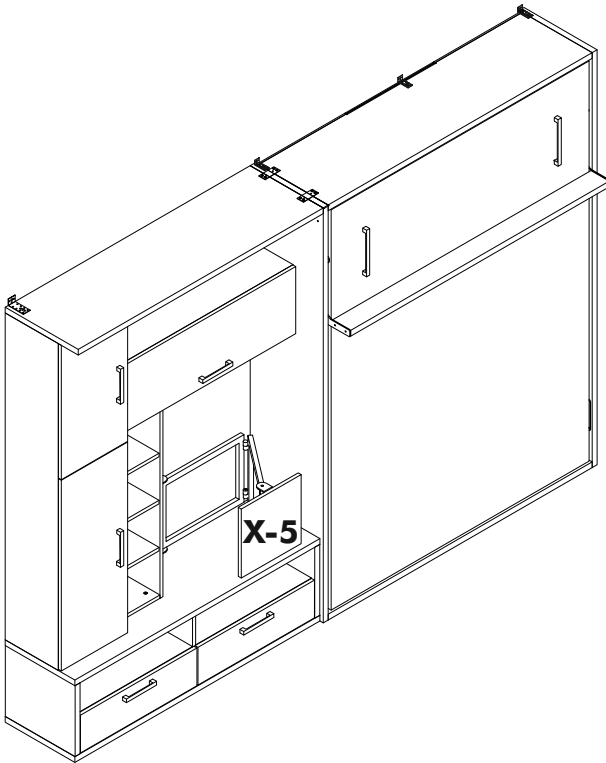


VIDEO




link

STEP 44

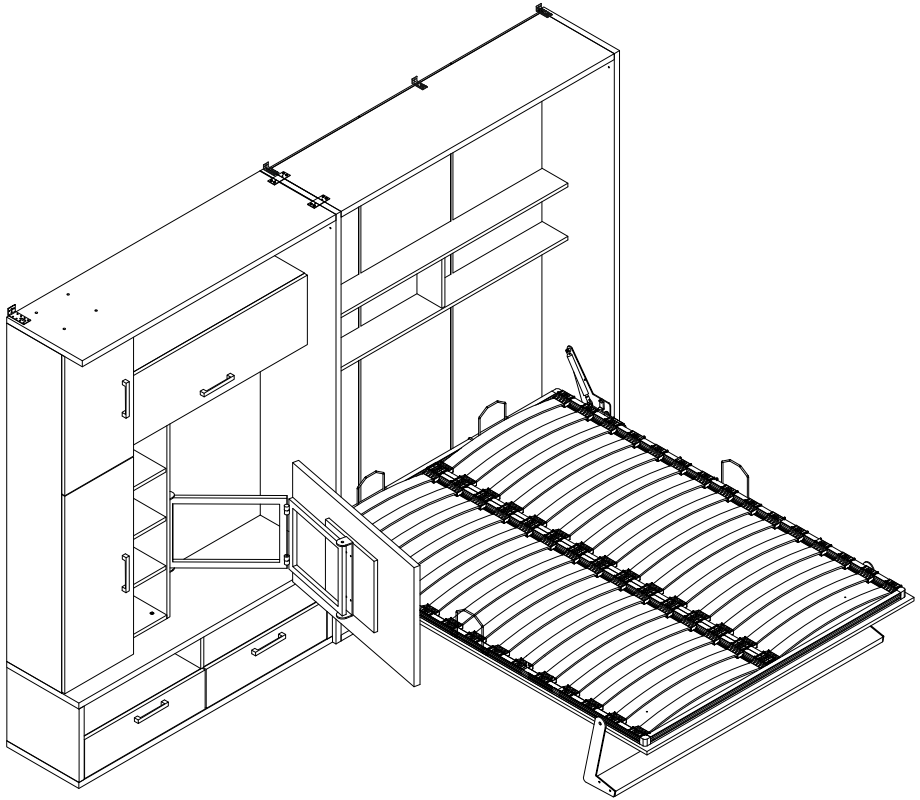

VIDEO



link

ATTENTION / HOW TO / READ ME / OWNER'S GUIDE

1. When mounting on a regular drywall, furniture must be fastened to wood or metal studs. Solid walls made of brick, concrete or similar strong material are also acceptable. Do not mount furniture to paper-mache or sheetrock (plasterboard) like material without properly fixing to stud.

2. For safety and product longevity you must periodically inspect the mounting and mechanical connections for integrity and tightness. Confirm hardware remains properly affixed and connections snug.

3. Wall Bed mattress thickness may not exceed 8 inches (200mm). Take care to remove pillows and excess blankets before closing. Doing so keeps mechanism free of obstruction and unnecessary stress.

4. Do not lean or rest heavy objects on side or top of furniture. This may cause balance issues and compromise the integrity of your mounting connections.

5. Please use the furniture's beds, desks and shelving as intended. Not designed to be sat, stood, leaned, jumped (etc) on. Improper use may cause personal injury and damage to property.

6. With seasonal humidity change you must inspect interior and exterior of furniture.

7. Single bed models are suitable for the weight of one person. Sleeping by more than one person will cause damage of the product.

8. Before any un-mounting or disassembly please contact Multimo for technical support and instruction. Failure to properly detach risks injury to person and damage to property.

9. For Bunk Beds:

- a. Always use provided ladder when accessing top bunk.
- b. Be slow, careful and aware of surroundings when opening top bunk.
- c. Do not horseplay. Beds are to be slept on only.
- d. Some have legs that fully extend when open- be aware of where the leg is and will be.



MULTiMO

www.multimo.com