

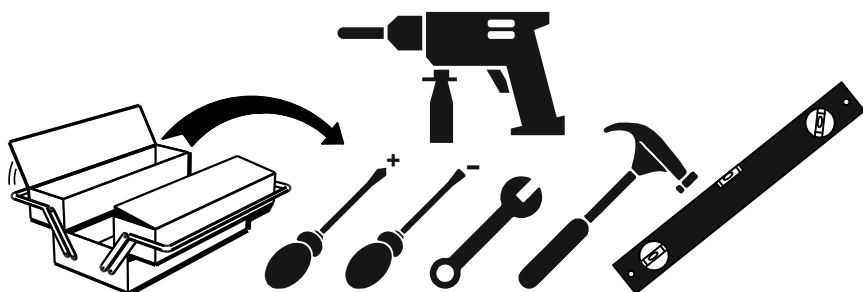
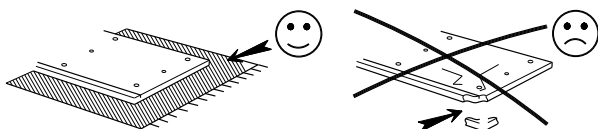
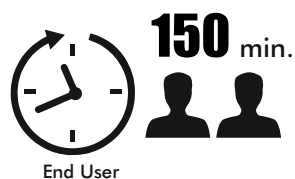


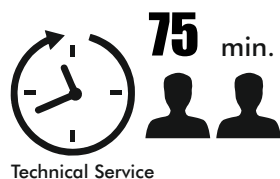


MULTIMO

226 ROYAL COUPLE BED

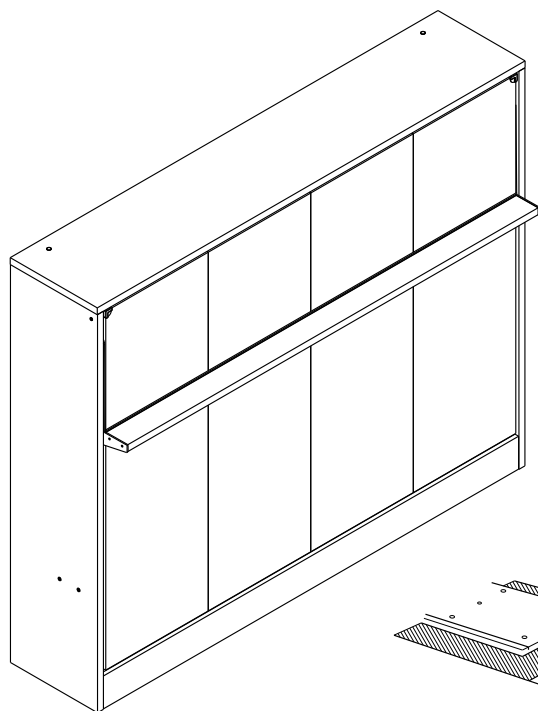










VIDEO

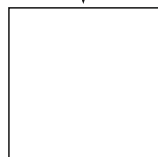












link

Track Title	Piece	(inch)			Piece	(mm)		
		Thickness	Length	Width		Thick	Height	Most
A-R / A-L	2	1,18	68,58	17,32	2	30	1742	440
B	1	0,71	82,68	16,54	1	18	2100	420
C	1	1,18	85,12	17,32	1	30	2162	440
D	1	0,71	82,68	11,81	1	18	2100	300
E	3	0,31	68,50	20,79	3	8	1740	528
F	1	0,71	82,68	5,67	1	18	2100	144
G-1	2	0,71	61,81	20,39	2	18	1570	518
G-2	2	0,71	61,81	20,39	2	18	1570	518
H	1	1,18	81,81	4,33	1	30	2078	110
K (OPTIONAL HEADBOARD)	2	1,97	82,48	22,44	2	50	2095	570



Accessories List

MXN 02  24 / piece	MXN - 03  9 / piece	MNG - 01  42 / piece	TAP - 01  44 / piece
KVL 01  34 / piece	VDA - 01 (6,5x50) mm  4 / piece	TAP - 02  4 / piece	CT - 01 (6x40) mm  2 / piece
OT-054  2 / piece	VD - 02 (3,5x25) mm  32 / piece	AVT - 01  8 / piece	DD - 02 (R8)  8 / piece
VD - 01(6X70) mm  8 / piece	HB - 04 (6x40) mm  2 / piece	PL - 01 (6x19x1) mm  2 / piece	SNO - 02 (M6)  2 / piece
IM - 01 (6x30) mm  4 / piece	SG - 01  2 / piece	OT-056D  2 / piece	VTB - 02 (4,2x16) mm  8 / piece
VD - 08 (4x18) mm  64 / piece	CTA - 01 (8x15) mm  8 / piece	PL - 05 (8x16x2) mm  10 / piece	CT - 08 (6x25) mm  2 / piece

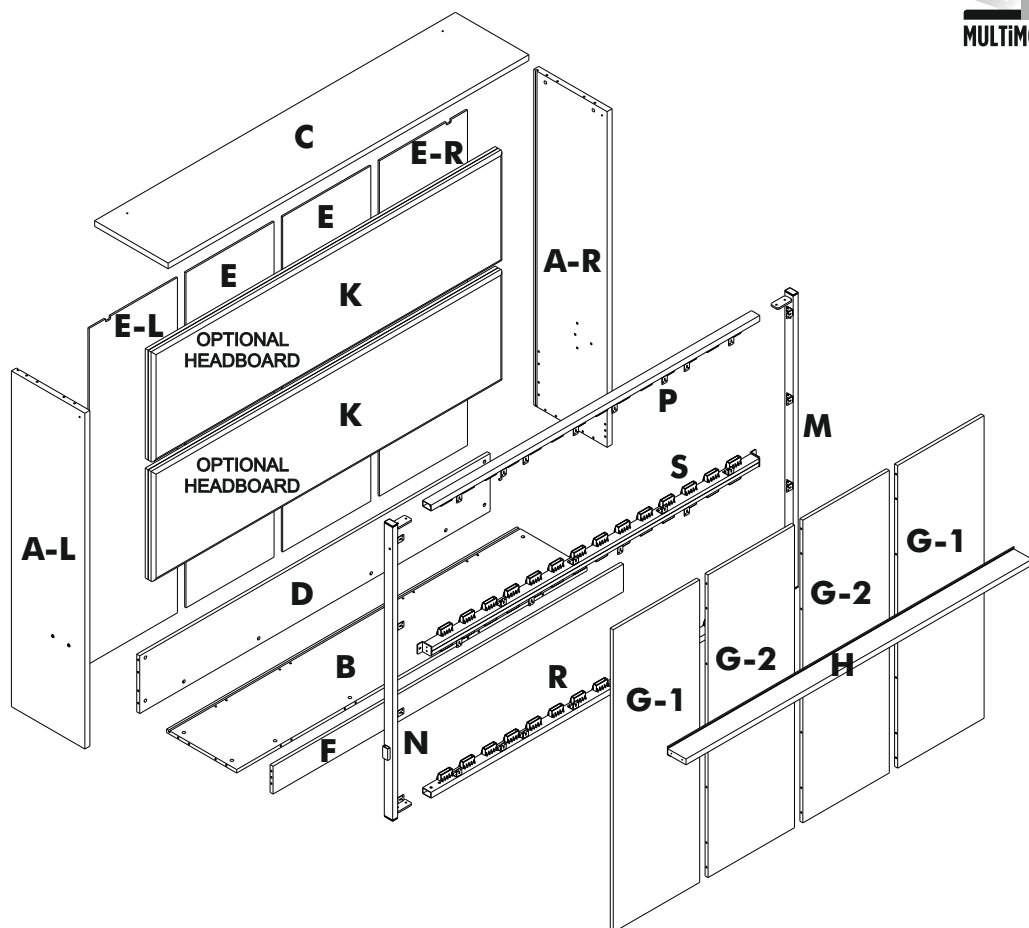


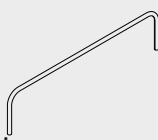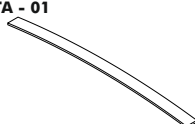CTM - 05 (8x45) mm  2 / piece	OT-056PE  2 / piece	KKS - 01  2 / piece	MKZ-10-70 M (1100 N)  1 / piece
SC - 92  2 / piece	DSE - 03  2 / piece	KMT - 02  2 / piece	KOR  1 / piece
LTA - 01  28 / piece	H 01  3 / piece	KOR 04 (30 X 50)  1 / piece	KLF 02 (fabric cover)  1 / piece

STEP 1

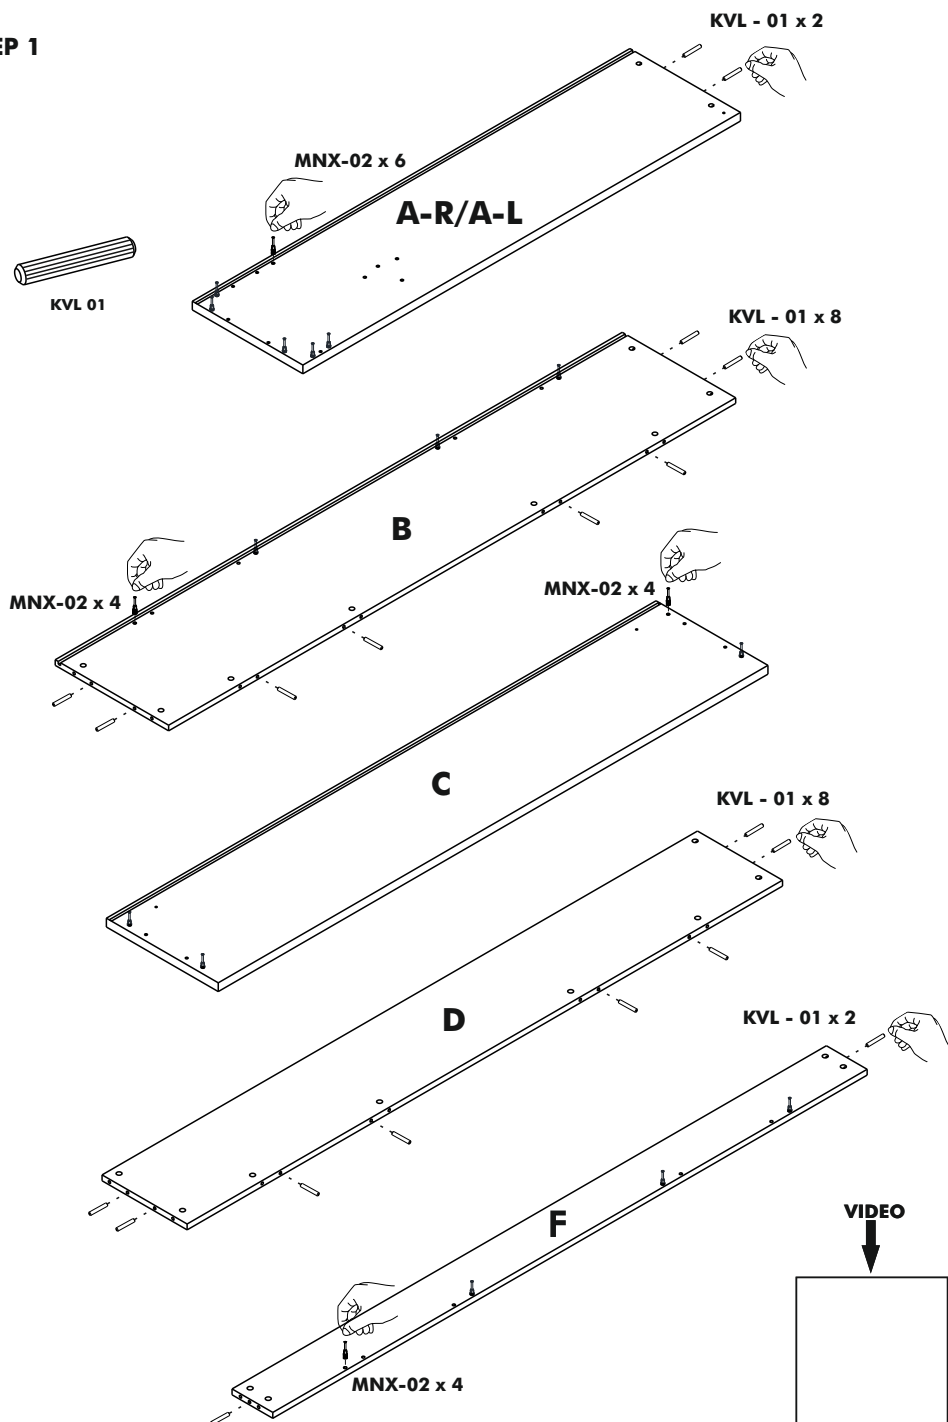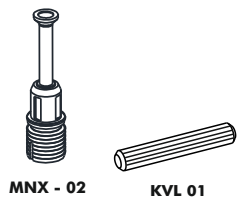

VIDEO

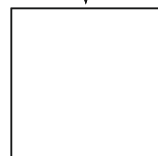


link

STEP 2




MNG - 01

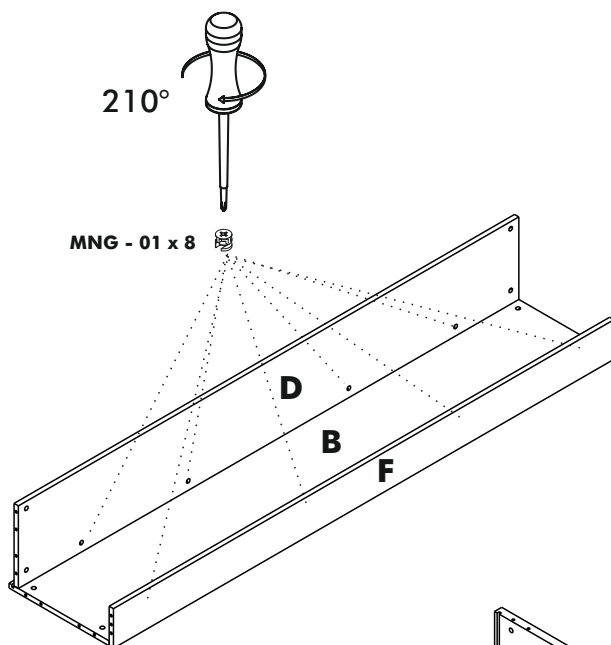


STEP 3



MNG - 01

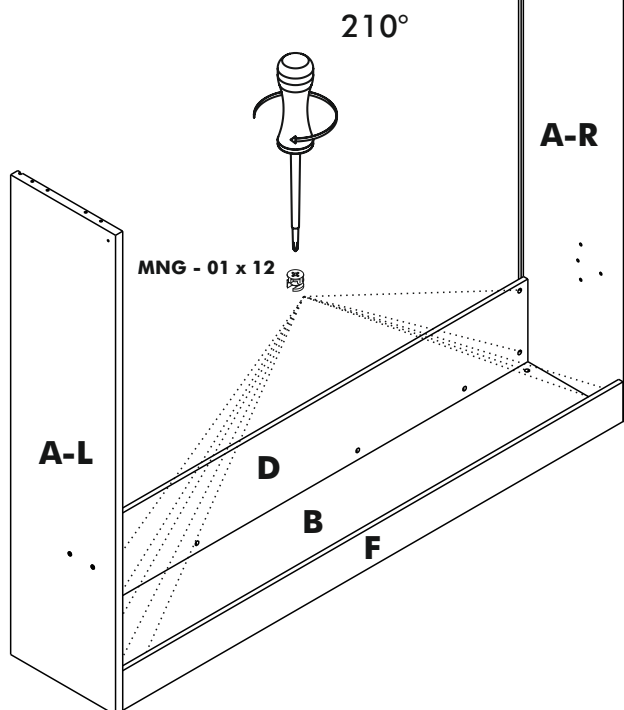


VIDEO

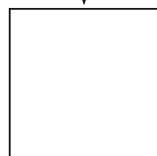


link


STEP 4

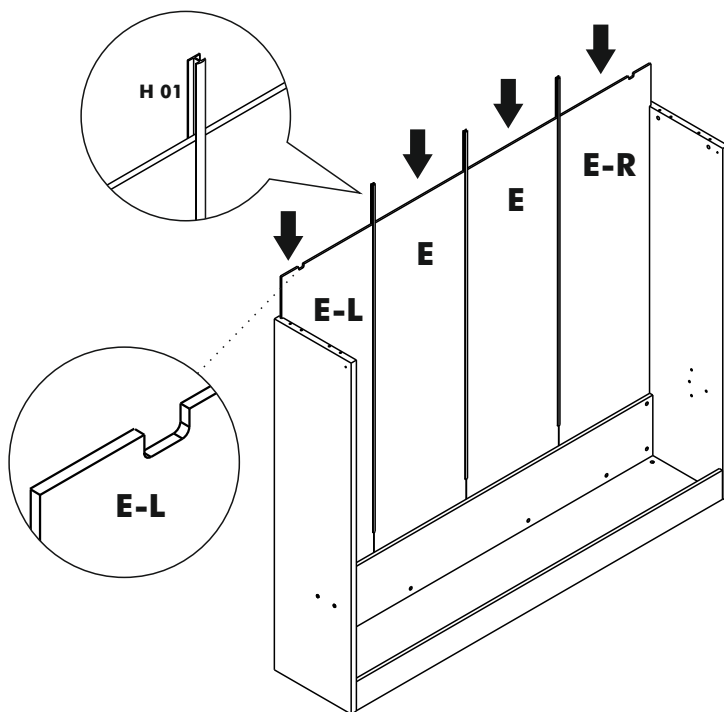


STEP 5

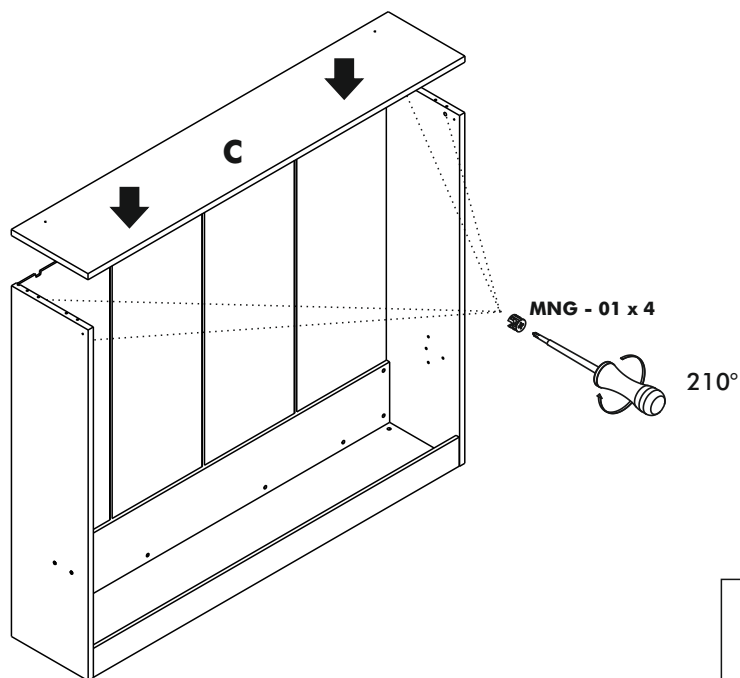


VIDEO

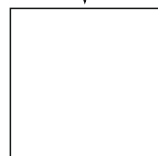


STEP 6

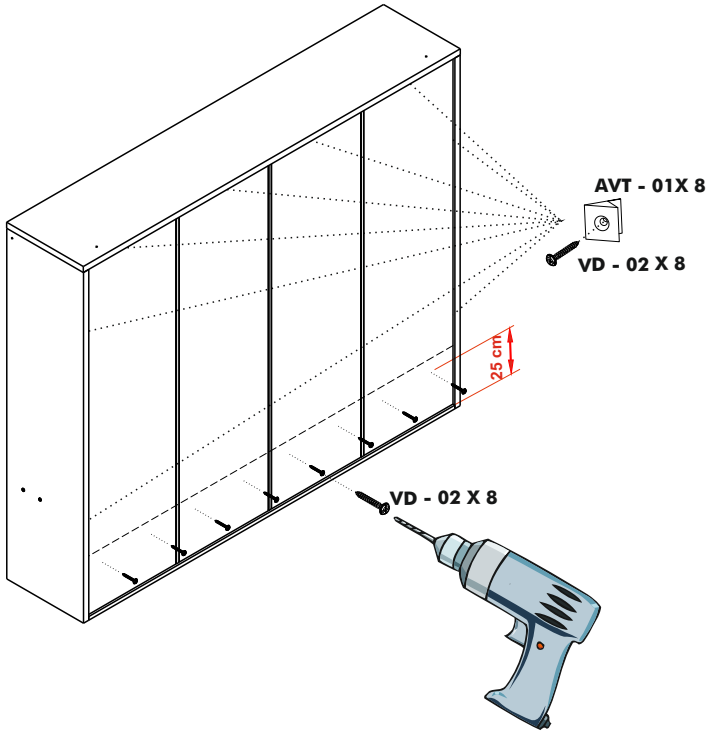

STEP 7

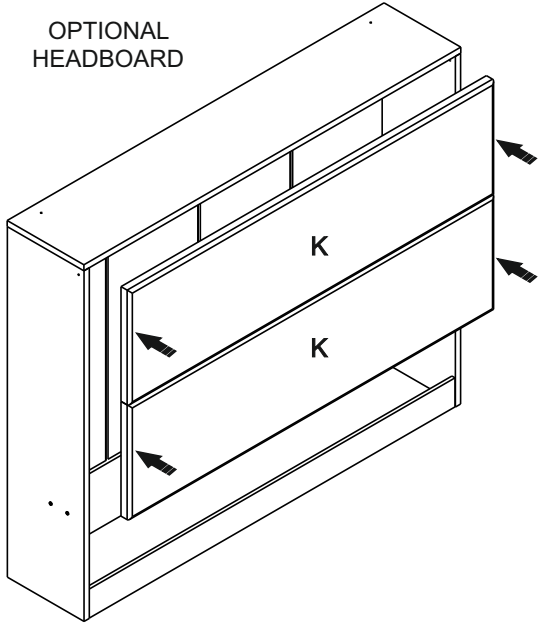



VIDEO




link

STEP 8

OPTIONAL
HEADBOARD

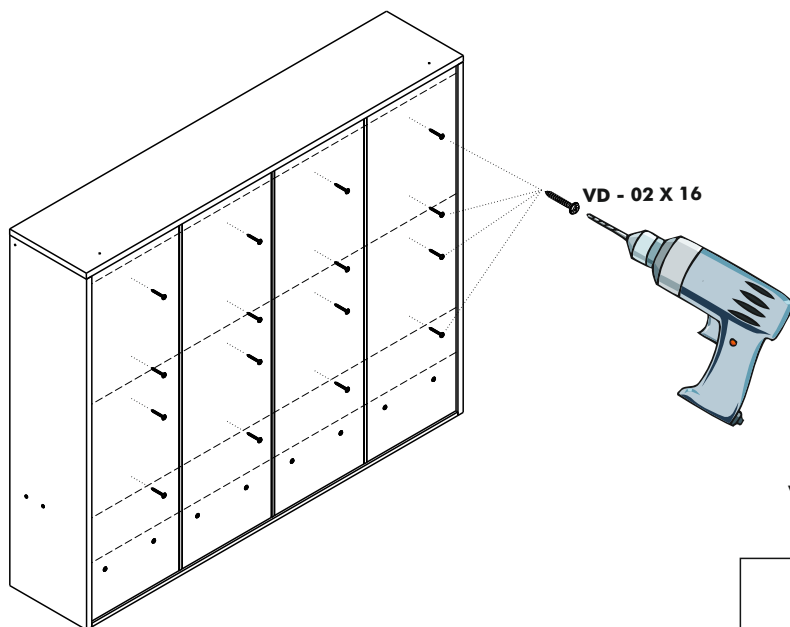
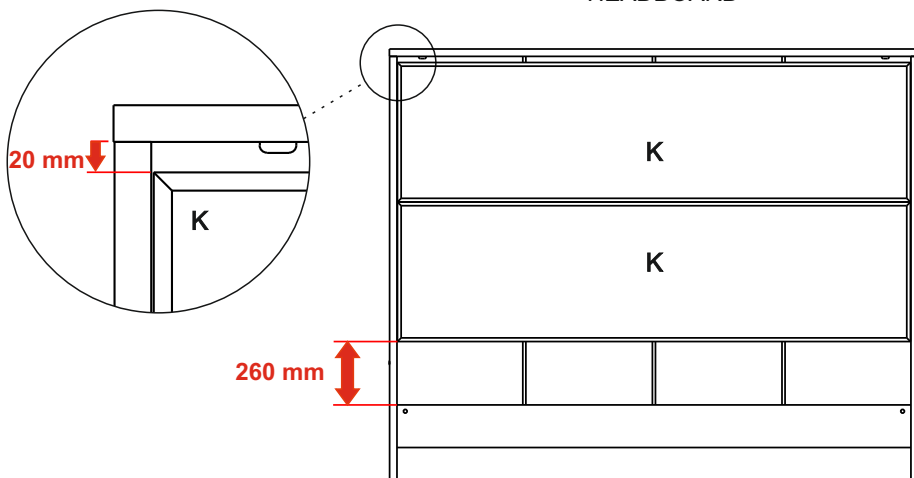


VIDEO

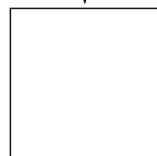


link

STEP 9

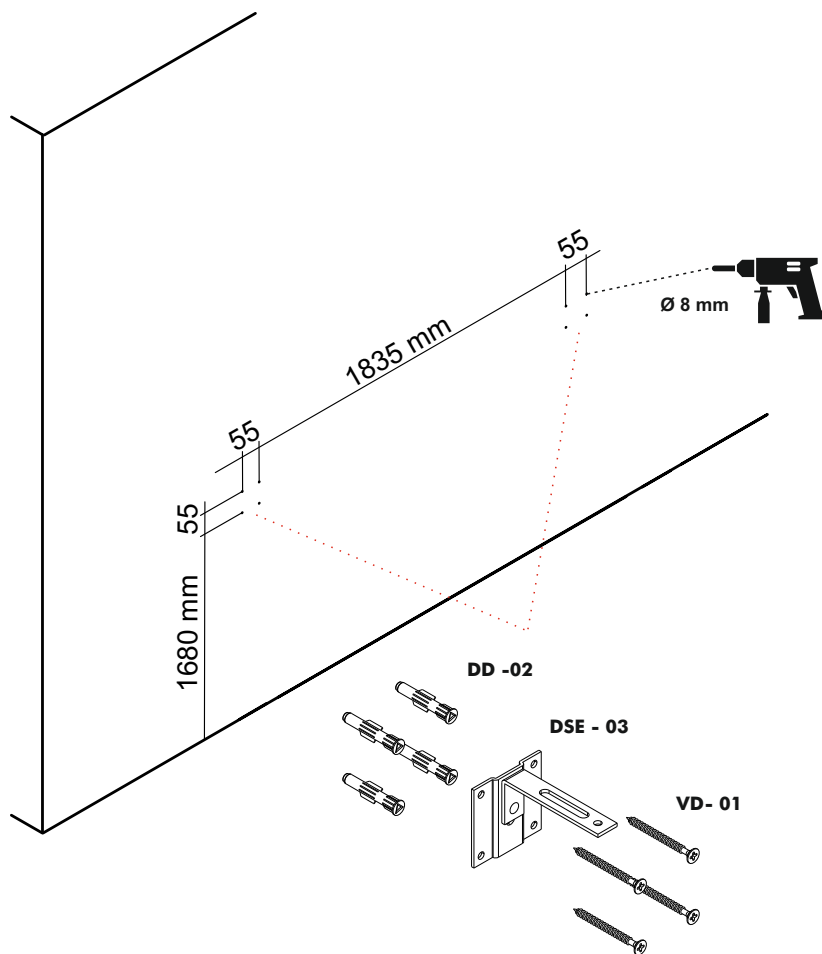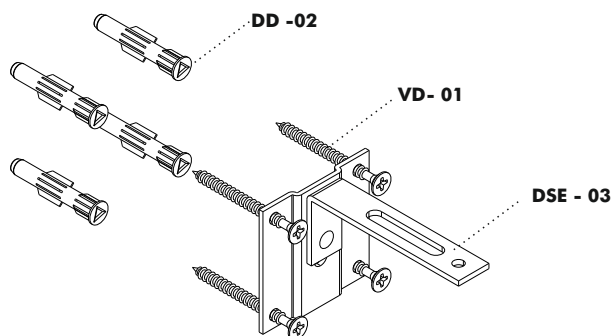


VIDEO

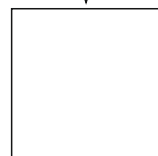


link

STEP 10

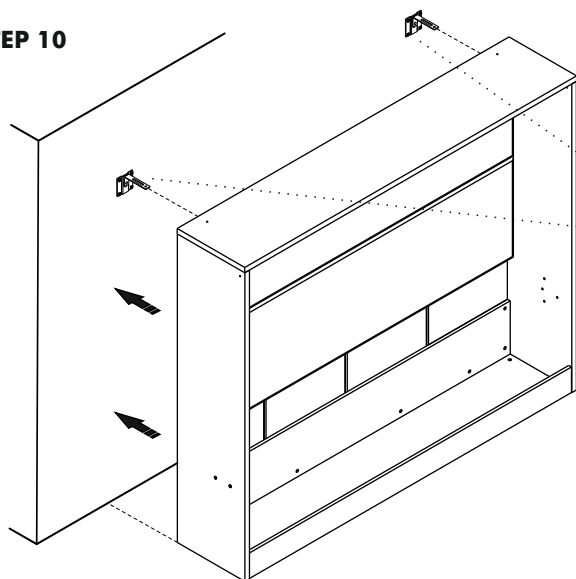


DSE - 03



STEP 11

1-


HB - 04

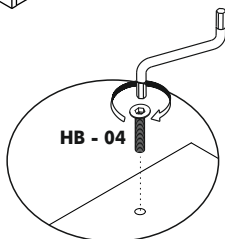

2-


PL - 01

SNO - 02

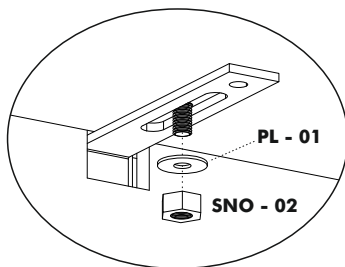


3-

VTB - 02

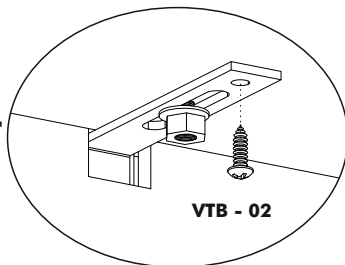


4-


TAP - 01

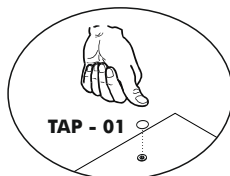


VIDEO




STEP 12

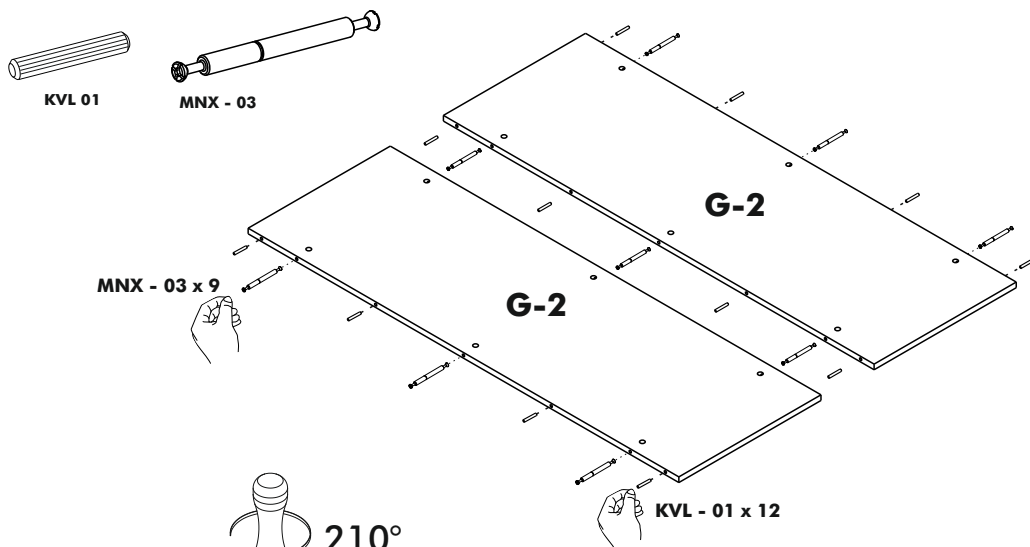

STEP 13

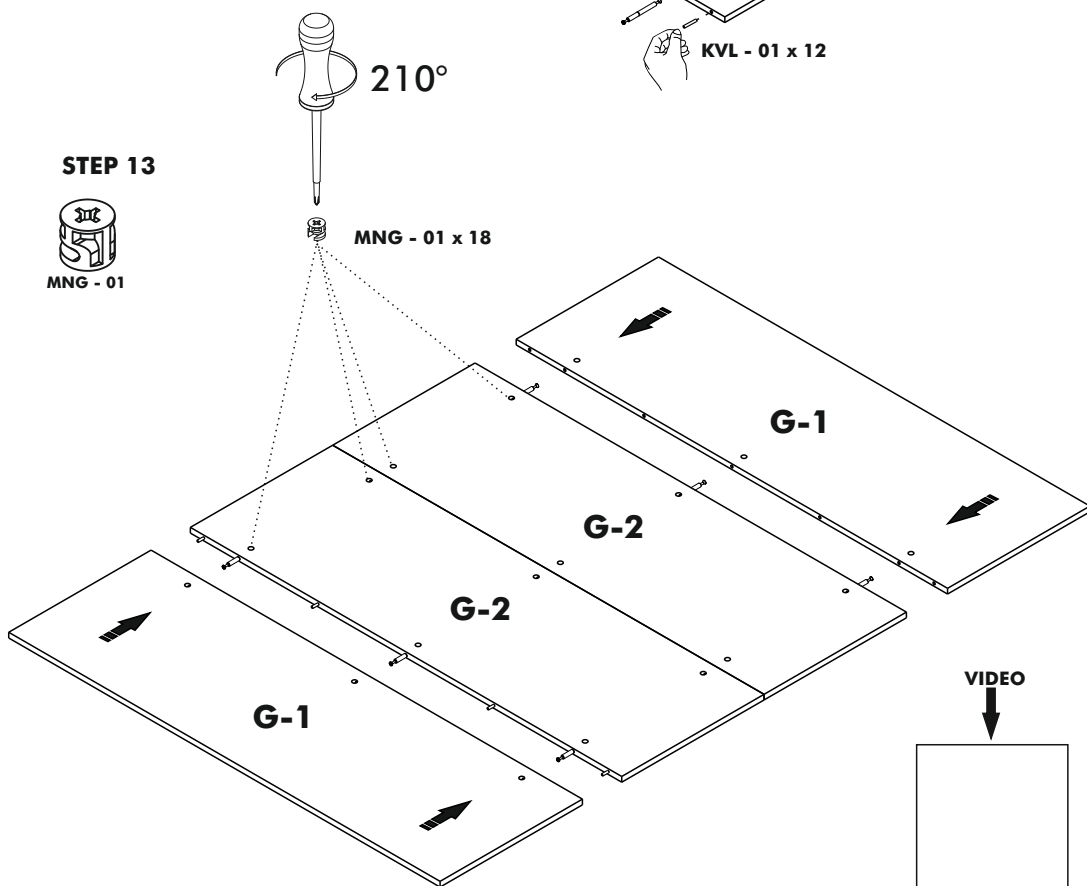


VIDEO

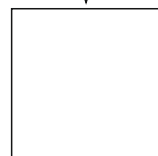


link


STEP 14

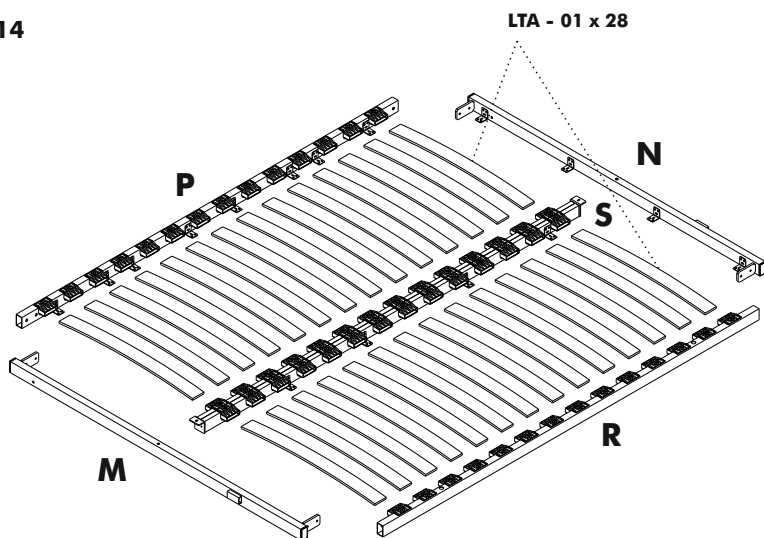

STEP 15

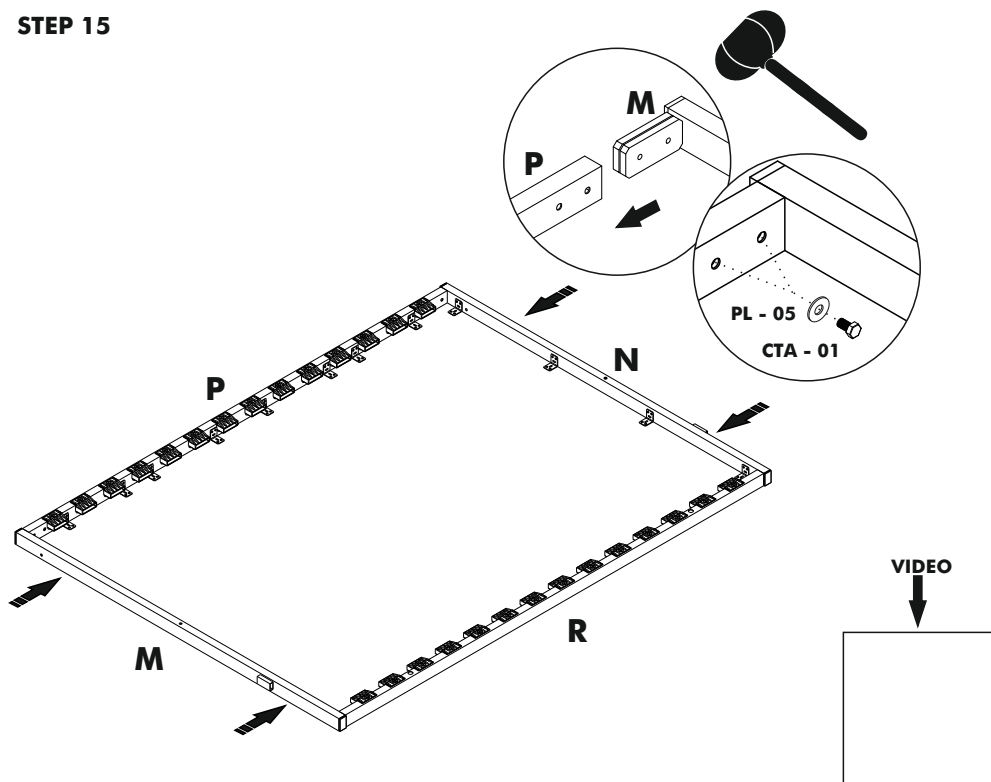



STEP 16

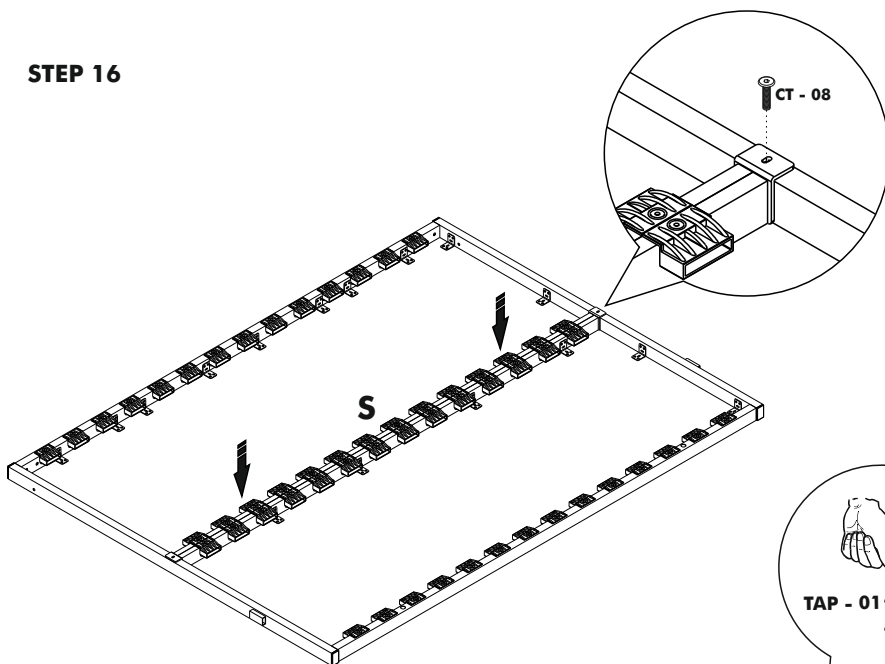

STEP 17


Doğru montaj için şarjlı matkap torkları, vidalamayı deforme etmeyecek şekilde ayarlanmalıdır!

For correct installation, the cordless drill torque must be adjusted, not to damage or affect the screws!

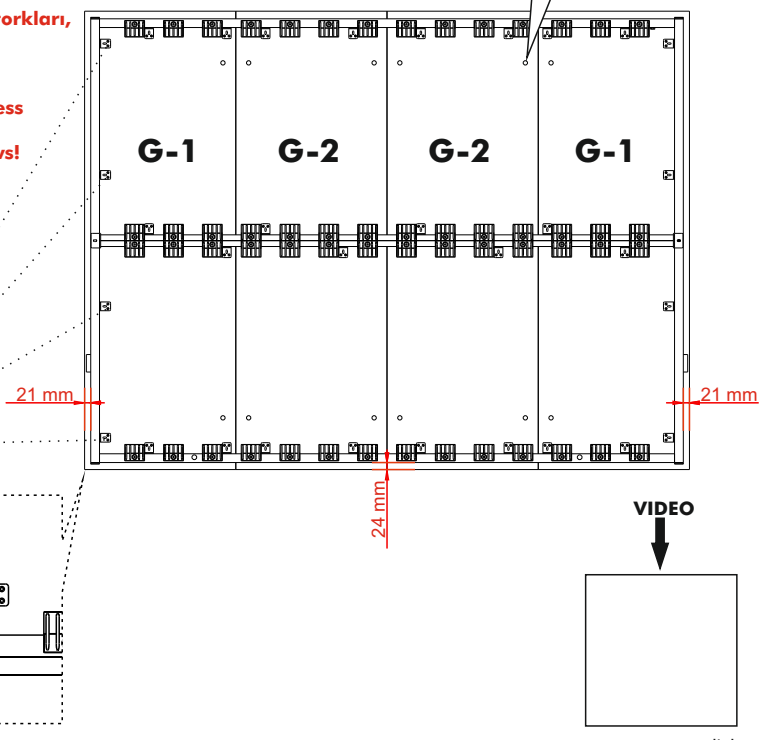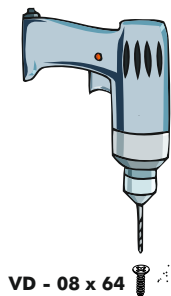


STEP 18

Unscrew the Screws

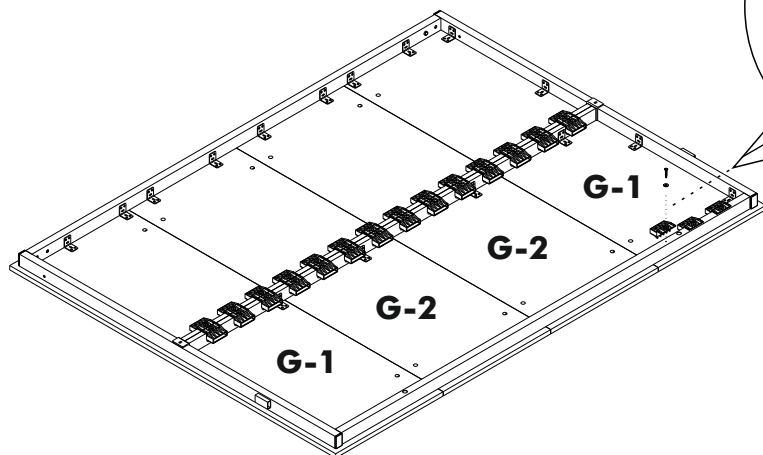


STEP 19

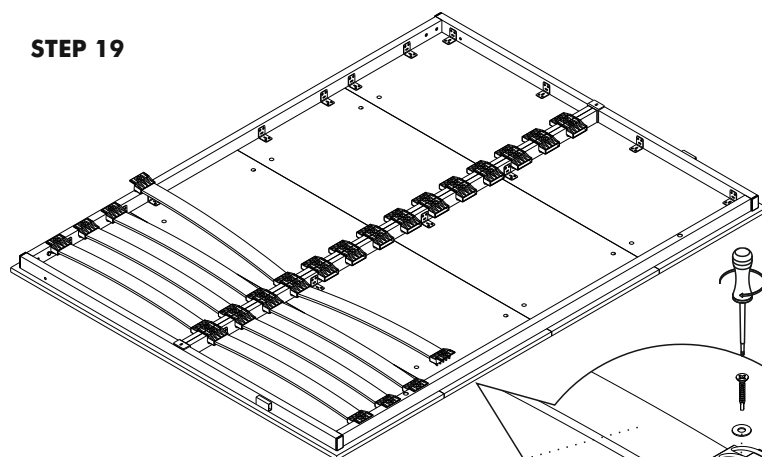


LTA - 01 x 28


VIDEO

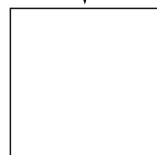


STEP 20

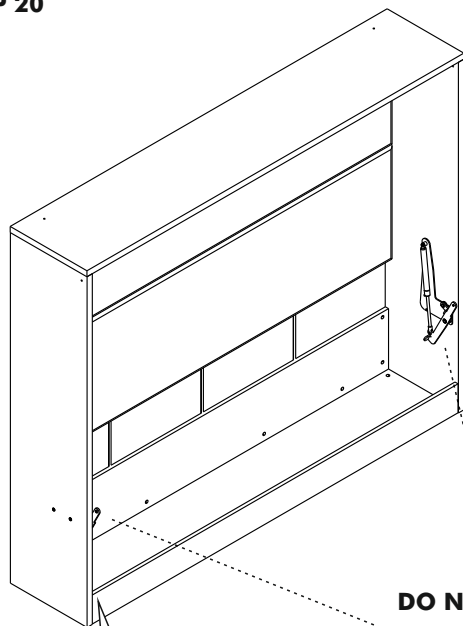


**Vidayı çıkarın
Remove the screw**

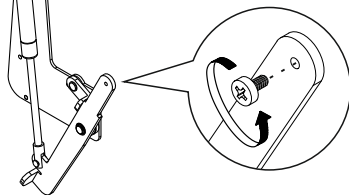

**CAUTION
DO NOT UNLOCK BEFORE INSTALL**

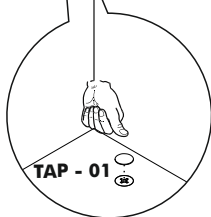


TAP - 01

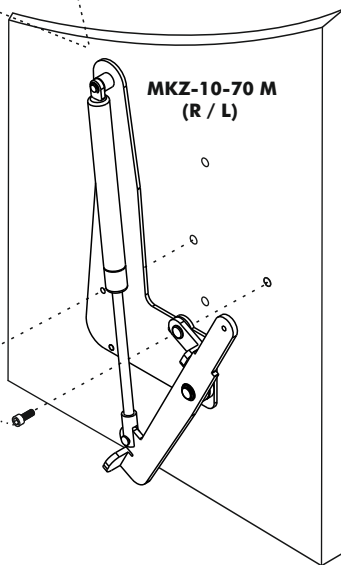


**MKZ-10-70 M
(R / L)**

IM - 01 X 2


AL - 02

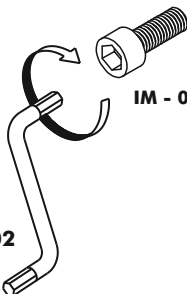

VIDEO




STEP 21

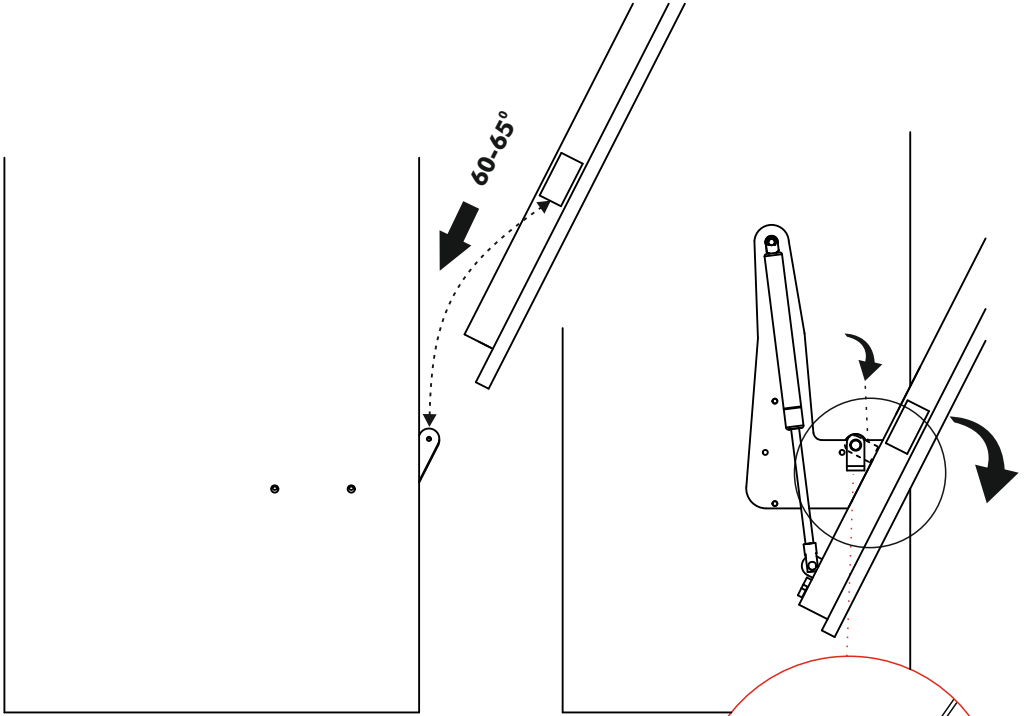


KAPAK KAPATILMADAN KİLİDİ İNDİRİN !!!

**LET THE MECHANISM LOCK MOVE DOWN,
BEFORE CLOSING THE FRONT PANEL !!!**

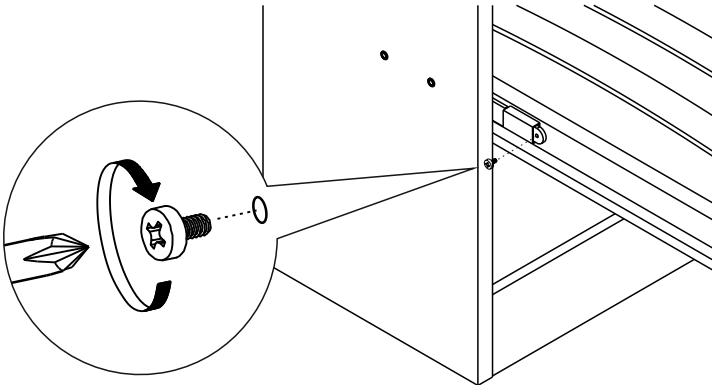


VIDEO




link


STEP 22

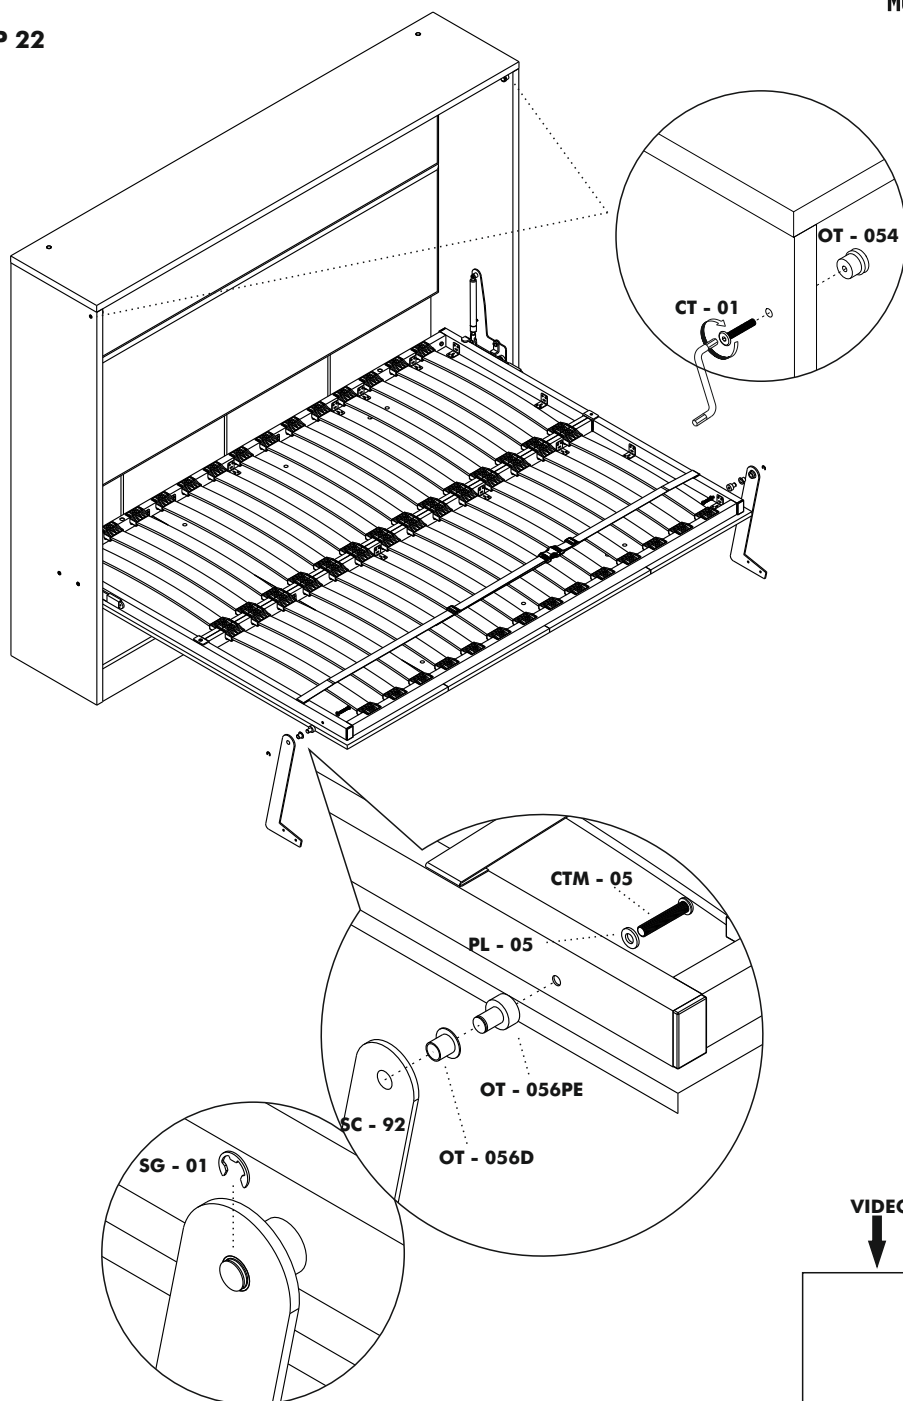

STEP 23


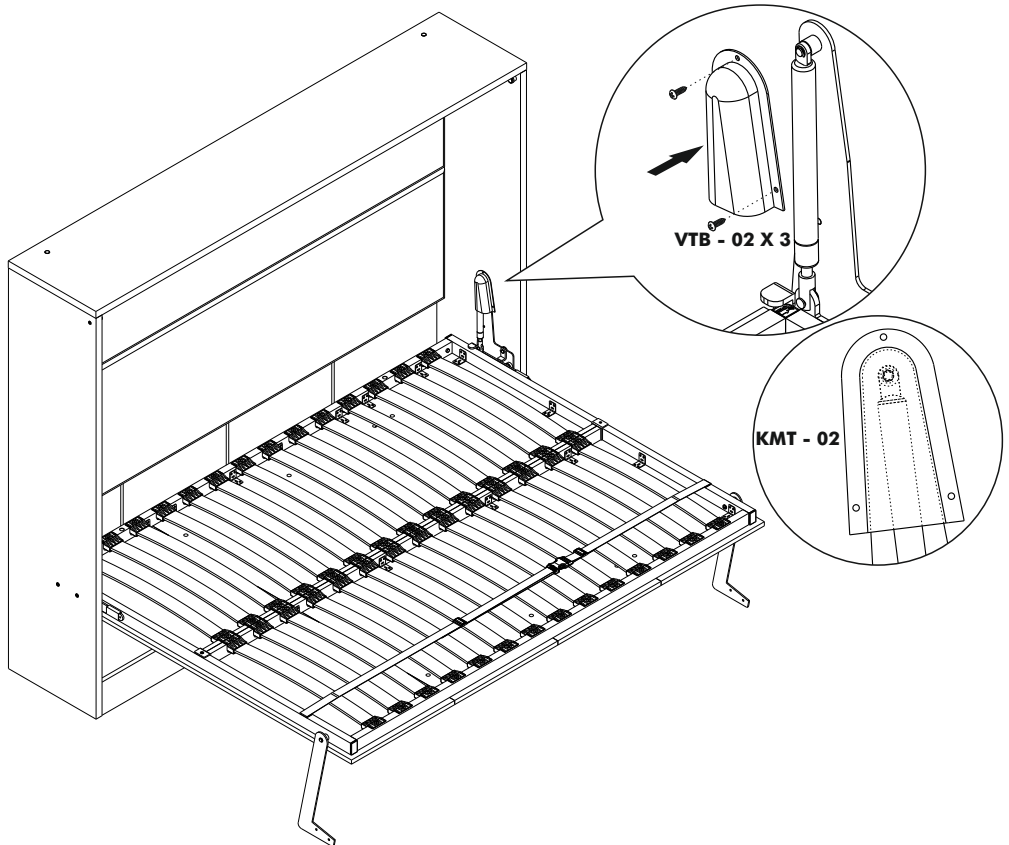


VIDEO




link

STEP 24



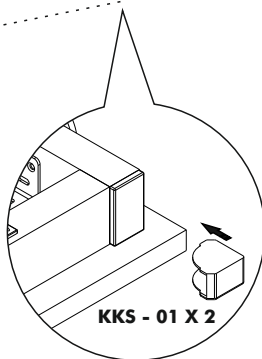
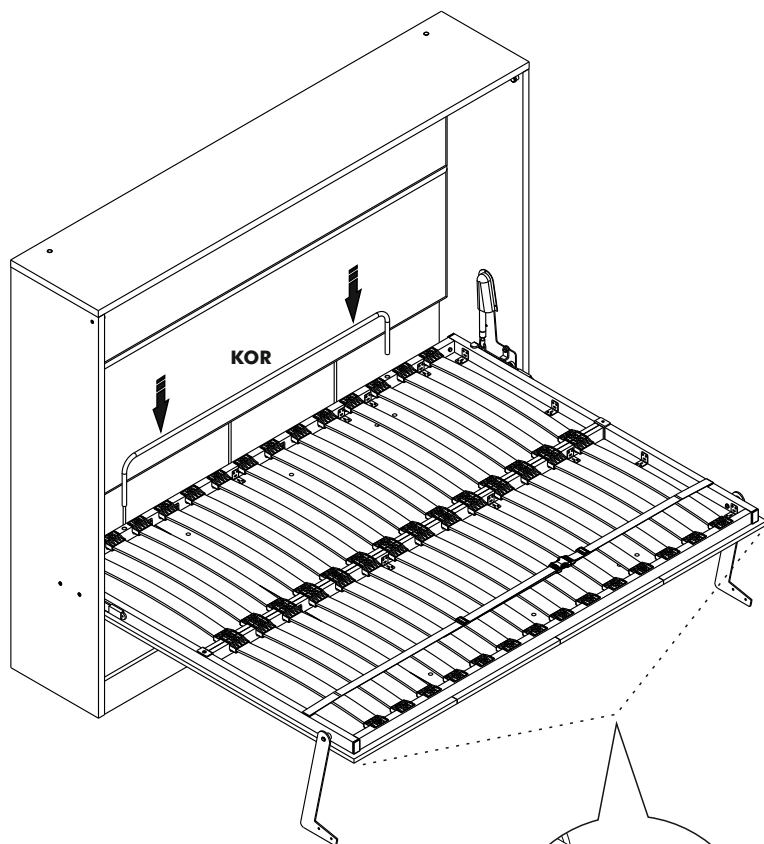


VIDEO




link

STEP 25

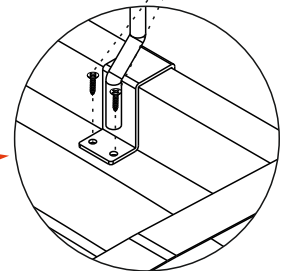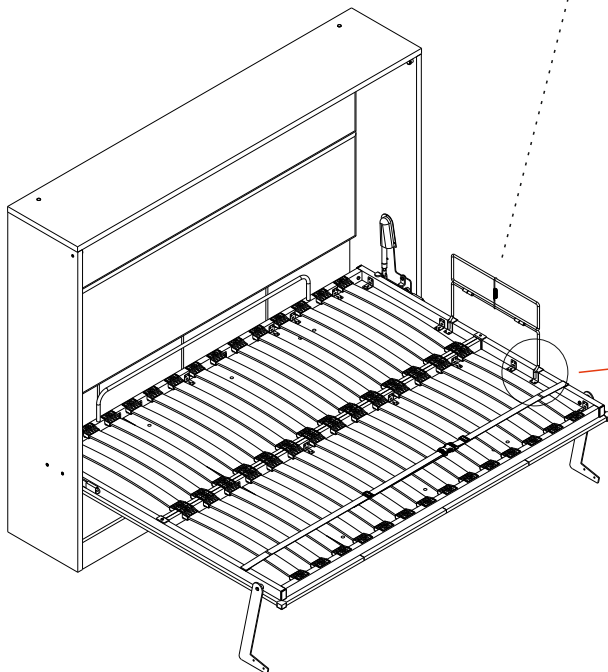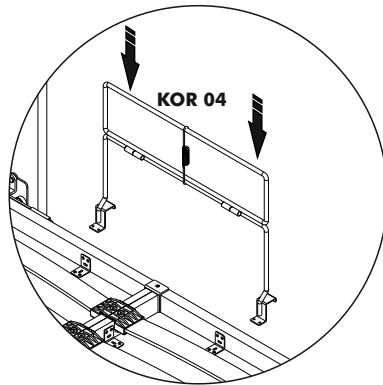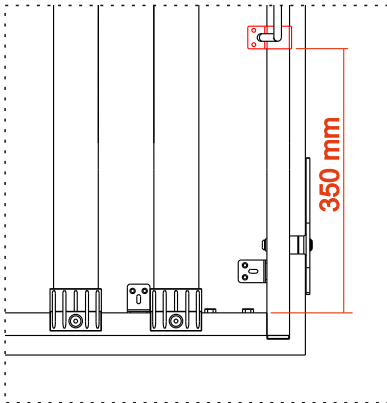


VIDEO

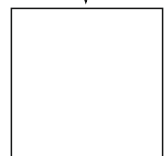


link

STEP 26

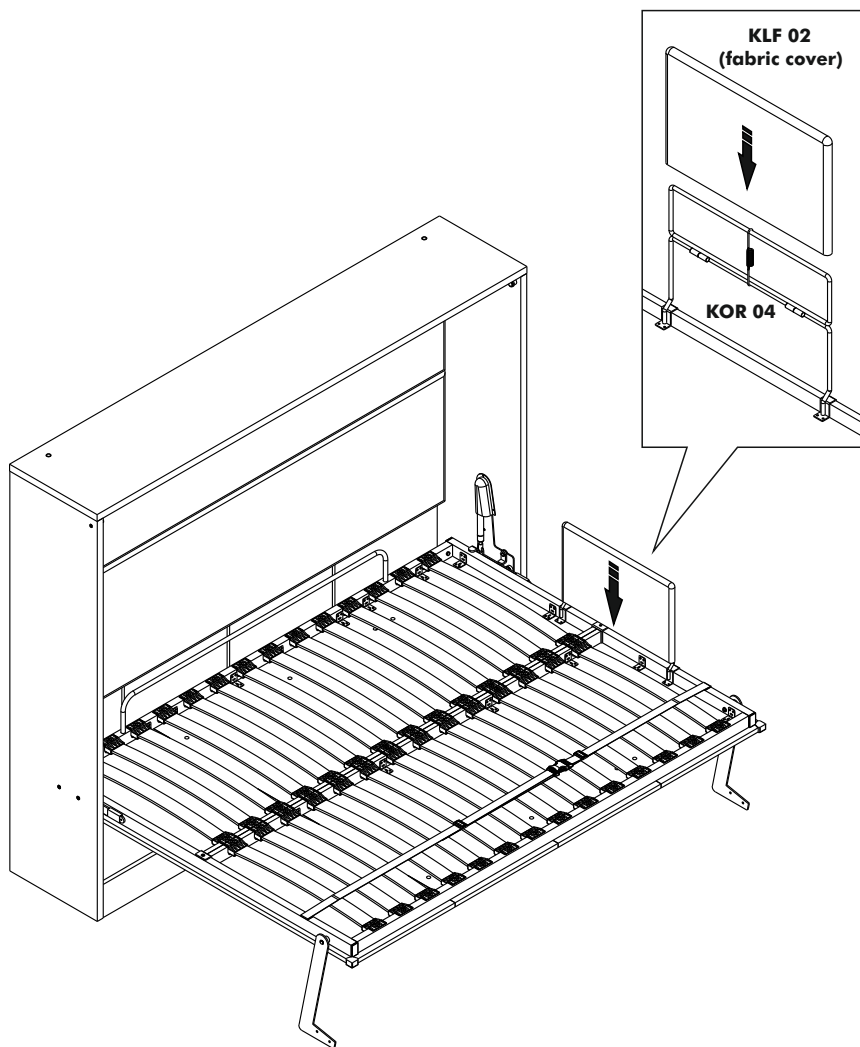


VIDEO

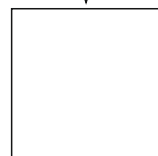

link

STEP 27

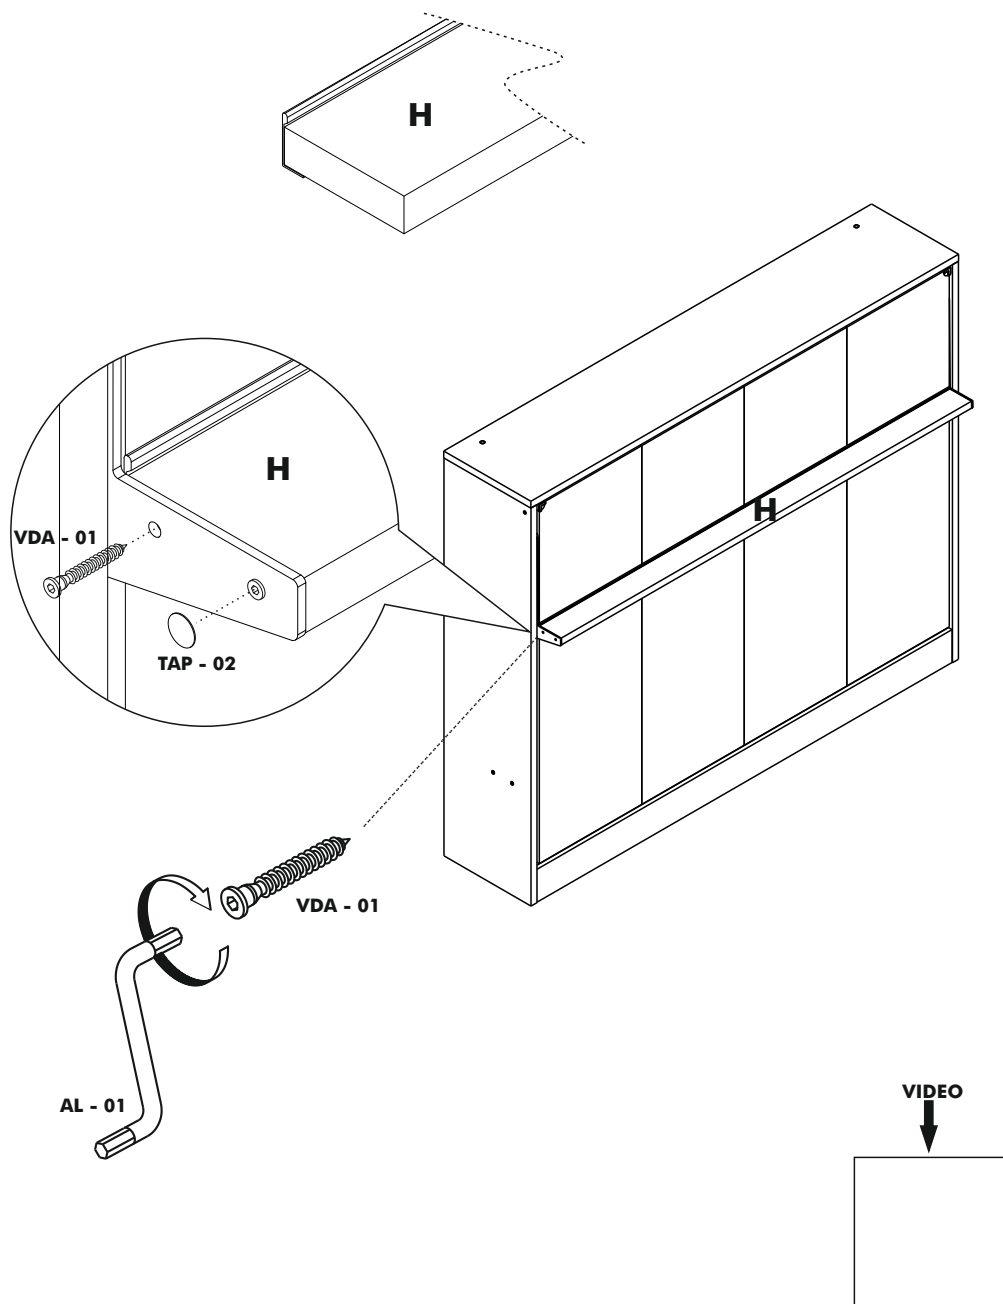

ATTENTION / HOW TO / READ ME / OWNER'S GUIDE

1. When mounting on a regular drywall, furniture must be fastened to wood or metal studs. Solid walls made of brick, concrete or similar strong material are also acceptable. Do not mount furniture to paper-mache or sheetrock (plasterboard) like material without properly fixing to stud.

2. For safety and product longevity you must periodically inspect the mounting and mechanical connections for integrity and tightness. Confirm hardware remains properly affixed and connections snug.

3. Wall Bed mattress thickness may not exceed 8 inches (200mm). Take care to remove pillows and excess blankets before closing. Doing so keeps mechanism free of obstruction and unnecessary stress.

4. Do not lean or rest heavy objects on side or top of furniture. This may cause balance issues and compromise the integrity of your mounting connections.

5. Please use the furniture's beds, desks and shelving as intended. Not designed to be sat, stood, leaned, jumped (etc) on. Improper use may cause personal injury and damage to property.

6. With seasonal humidity change you must inspect interior and exterior of furniture.

7. Single bed models are suitable for the weight of one person. Sleeping by more than one person will cause damage of the product.

8. Before any un-mounting or disassembly please contact Multimo for technical support and instruction. Failure to properly detach risks injury to person and damage to property.

9. For Bunk Beds:

- a. Always use provided ladder when accessing top bunk.
- b. Be slow, careful and aware of surroundings when opening top bunk.
- c. Do not horseplay. Beds are to be slept on only.
- d. Some have legs that fully extend when open- be aware of where the leg is and will be.



www.multimo.com